

Programming manual

N°7383

05/17

**"LT"
key pad**

***2-Leaf "LT 100"
and Sliding "LT 200" Operators***




(Document reserved for installers)

Technical specifications

Power supply	LR03 AAA battery
Average consumption	5 mA while pressing the keys and 30 mA in transmission
Transmission frequency	433.920 MHz
Number of channels	3
Type of coding	Rolling code
Duration of transmission	About 1 second
Battery life	5000 activations with alkaline battery
Signage	Buzzer
Degree of insulation	IP54

Key pad presentation

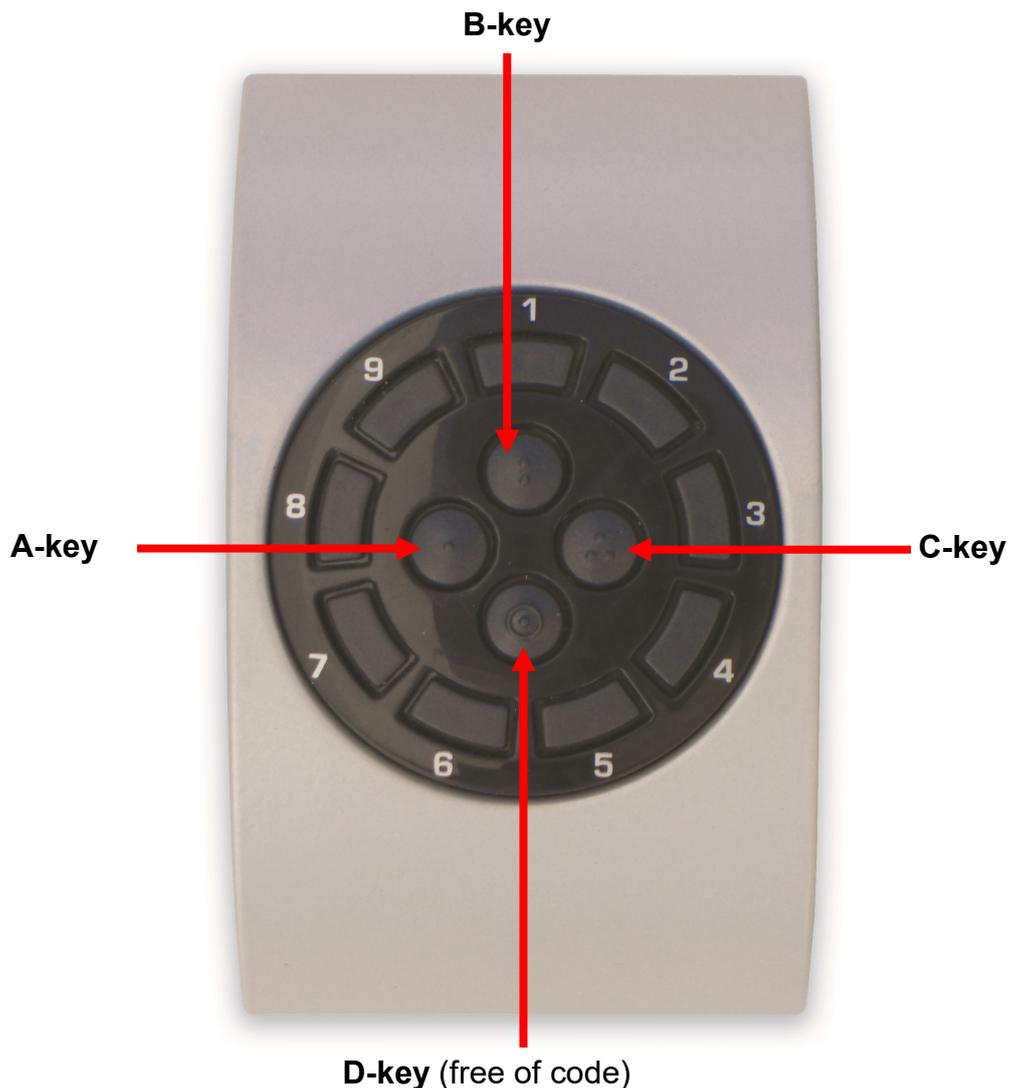

Programming

Key pad position information :

- If the key pad is in vertical position your default master code is 1111.
- If the key pad is in horizontal position your default master code is 3333.

Creation of a passcode paired with channels A, B and C (can be 3 to 5 digits)

- 1 - Press the A- and B-keys until you hear 3 beeps.
- 2 - Insert the master code (e.g. 1111, if key pad in vertical position) and press the D-key, the key pad emits 3 beeps.
- 3 - Insert a code of your choice followed by a channel A, B or C (e.g. 1945A), the key pad will emit a prolonged beep to confirm the registration.
- 4 - Wait for the key pad to emit a 2nd long beep to exit programming.

If you wish to create other access codes :

Repeat the same procedure for the other channels.

Inserting your access code on the operator

- 1 - Press the operator  button, 2 seconds (LED "Radio" lights up).
- 2 - On the key pad, dial your code as well as the previously memorized channel (e.g. 1945A), the LED "Radio" flashes.
- 3 - Press the button  or wait 10 seconds to exit the programming.

Erasing a passcode on one of the channels

- 1 - Press the B- and C-keys until you hear 3 beeps.
- 2 - Insert the master code (e.g. 1111, if key pad in vertical position) and press the D-key, the key pad emits 3 beeps.
- 3 - Press the key of the channel you wish to delete (A, B or C), the key pad will emit 3 beeps, to confirm the deletion of the access code.
- 4 - Wait for the key pad to emit a 2nd long beep to exit programming.

If you wish to delete other access codes :

Repeat the same procedure for the other channels.

Modification of the master code (optional) *(can be 3 to 5 digits)*



**If you change the master code and then lose it,
no further programming changes will be possible.**

- 1 - Press/hold the A- then C-keys until you hear 3 beeps.
- 2 - Insert the default master code (e.g. 1111, if the key pad is in vertical position) and press the D-key, the key pad will emit 3 beeps.
- 3 - Insert a master code of your choice (e.g. 2345) and press the D-key, the key pad will beep 3 times for registration.
- 4 - Re-insert your chosen master code (e.g. 2345) and press the D-key, the key pad beeps 3 times to confirm registration.
- 5 - Wait for the key pad to emit a long beep before exiting programming.