

Manual : N° 7406 Installation complement

Sliding Gate





 


Manual or motorized gate **Except TOTEM operator** Installation of bottom guiding rail = WALL 70 mm Appropriate bracket attachments (not supplied) Ø8 mm Installation of the U-section = Plumb the profile (wedge if necessary) WALL Faste-- 5 ning holes Please note : To fix the profile, use the rail axis. Appropriate bracket attachments (not supplied) Ø8 mm




Alignment check







IMPORTANT:

To ensure the gates operate correctly check that the U-section is plumb and the gate is level when closed.

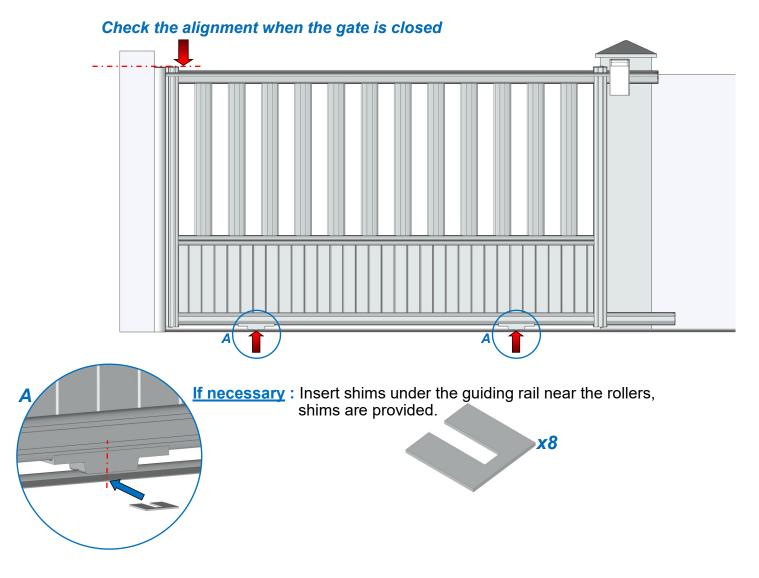

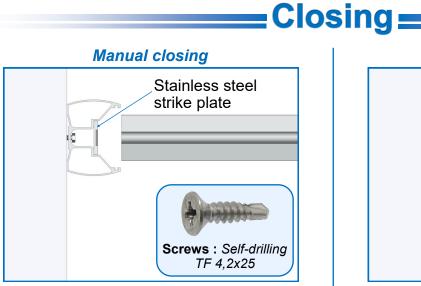

Place the stainless steel strike plate in relation to the lock hook and secure it with the screws.

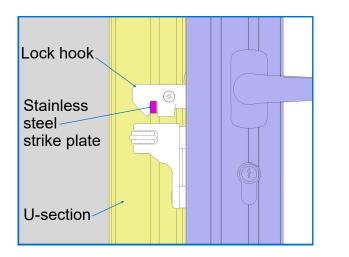



 Motorized closing


 Reception stop


 Buffer

 Screws : Self-drilling

 TF 4,2x25

Place the receiving stop (with buffer) over the centering roller, then secure it with the screws.

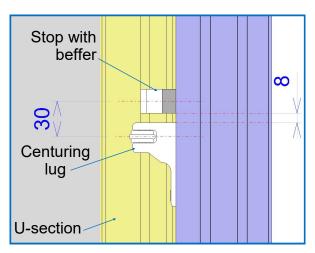


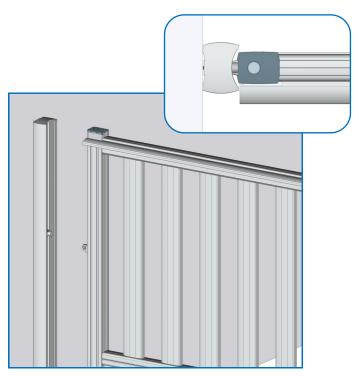




Gate with TOTEM operator


Installation of the bottom guiding rail

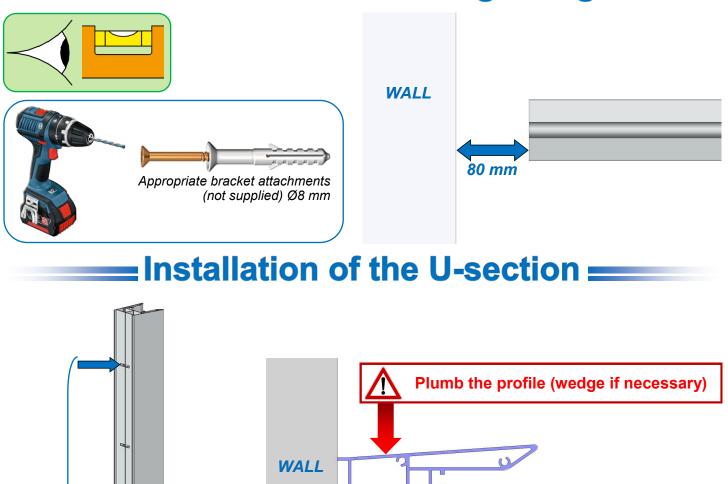


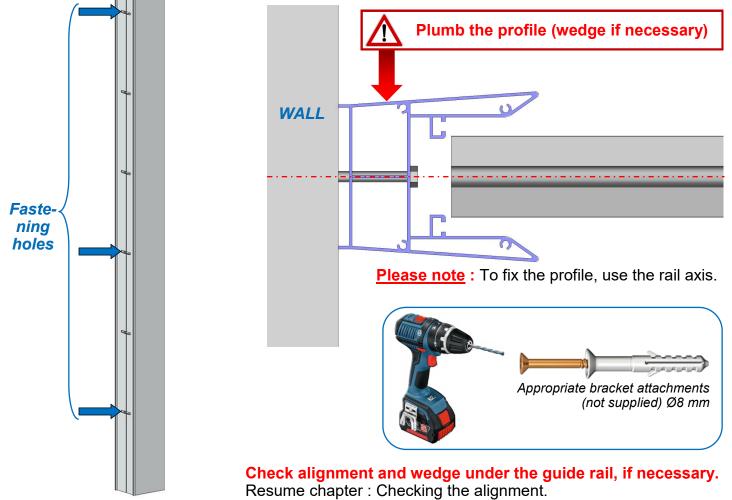




Installation of center guides =

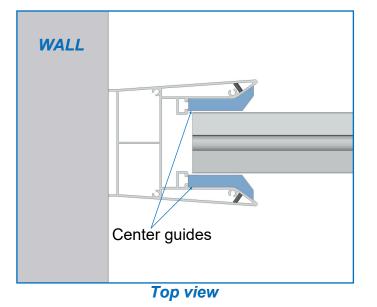


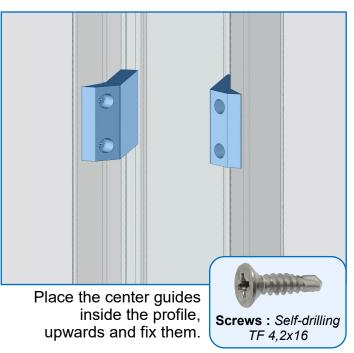

Closing and finishing:

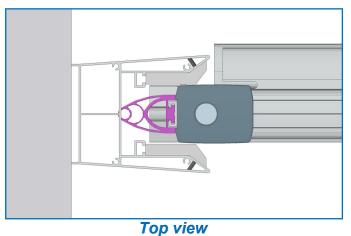

Check the manual closing of the gate, the safety edge must fit correctly into the receiving profile between the centering guides.

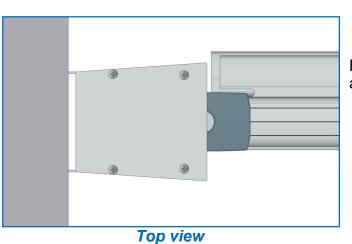

Place the finishing cap above the U-section and fix it.



11/17