

Manual No. 7083

07/24

INSTALLATION


Residential garage doors

Manual or **Motorised**



PRE-ASSEMBLED RE100

(Extension Springs)

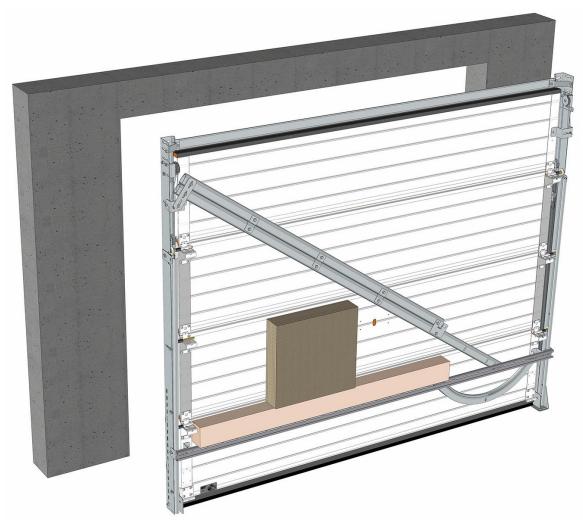

(Document reserved for installers)



Contents

Before installation	3
Required equipment	3
Installation instruction	4
Kit contents for each door configuration/option	5
Kits for MOTORISED and MANUAL doors	
Kits for MOTORISED doors	6
Kits for MANUAL doors	6
Pre-assembly installation	7
Preparing the pre-assembly	7
Checking the bay	7
Layout of the frame	8
Fixing the vertical rails	8
Horizontal rail installation	9
Assembling the stops (motorised doors)	9
Assembling the curves	9
Disassembling the parts used for transport	10
Assembling the 1 st horizontal rail	11
Assembling the 1st upper roller	13
Disassembling the 2 nd Rail/Shutter connecting lug	
Assembling the 2 nd horizontal rail	
Installing the 2 nd upper roller	
Disassembling the back bar	
Assembling the back bar brackets	
Installing the back bar	
Installing the hangers	
Back bar extension (option)	
Checking the diagonals	
Cable attachment	
Opening the shutter	
Cable attachment points	
Vertical rail finalization	
Fixing the rails	
Lower the shutter	
Adjustments	
Adjusting and fixing the fascia	
Adjusting the rollers	
Balance	
Checking the balance	
Adjusting the spring tension	
Finishes	
Fixing the end position clips (manual door)	
Assembling the handle	
Assembling the latch (optional on motorised doors)	
Installing the lock (optional on motorised and manual doors)	
Installing the pull cord (if manual door)	
Weather seal (optional)	
Greasing the bottom of the rails	
Cable labels	
Fixing the « SOMMER » operator to the back bar	
Fixing the FAAC and CAMÉ operators on the shutter	
o	



Before installation

Required equipment



Spirit level



Clamps



Laser level



Plumb bob



Tape measure



Utility knife



Electric screwdriver



Sockets



Cruciform bit



Flat wrench



Allen key



Perforator



Tory h



Ladder



Phillips screwdriver



Flat screwdriver



Pencil



Grinder



Combination pliers



Cutting pliers



Locking pliers



Steel drill bit Ø2-4.2-4.5-10-13



Hammer



Rivet gun



Hacksaw



Silicone sealant



Brush



Pot of grease



07/24



Installation instruction



CAUTION!

To ensure that this product is assembled, used and maintained in complete safety,



it is important to follow the instructions provided in this document.

For everyone's safety, please adhere to the precautionary measures below.

- Before beginning the assembly, read this manual carefully.
- This closure must be installed by a professional technician.
- All the parts delivered are specifically sized for this product.
 Adding and/or using other parts may be detrimental to safety and may affect the product's warranty.
- Any modification or improvement of this closure must be compliant with the standard BS EN 13241:2003+A2:2016.
 In this case, a "modification/transformation" file must be created by the installer as per the standard BS EN 12635:2002+A1:2008 annex C.
- Considerable force is exerted by the extension springs; carry out work in accordance with the safety instructions. Use the appropriate tools to install these products. Ensure that all work is carried out on a stable floor.
- Ensure that the assembly area is adequately lit, clear, clean and clearly marked out.
- Ensure that no other people are present at the assembly site apart from the installers.
 Non-authorized persons (children for example!) who are present at the site risk injury during assembly.
- All the components of this closure must be installed in compliance with the installation instructions provided in this manual.
- All the requirements of the standards BS EN 13241:2003+A2:2016 must be met and verified if necessary.

Max. tightening torque:

Assembly screws: 10 Nm

Shutter mounting screws : 12 Nm

Min. working load per attachment point :


Rails : 40 daN





Kit contents for each door configuration/option

Kits for MOTORISED and MANUAL doors



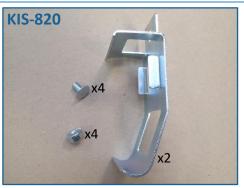


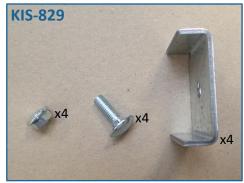

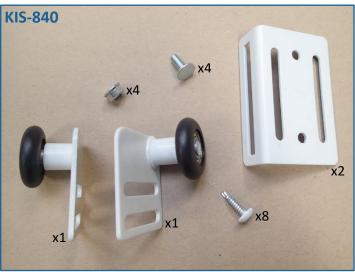





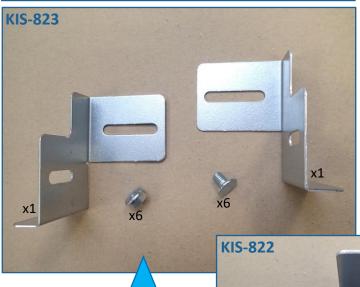

OR





Kits for MOTORISED doors








Kits for MANUAL doors






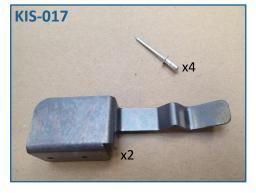




Pre-assembly installation

Preparing the pre-assembly

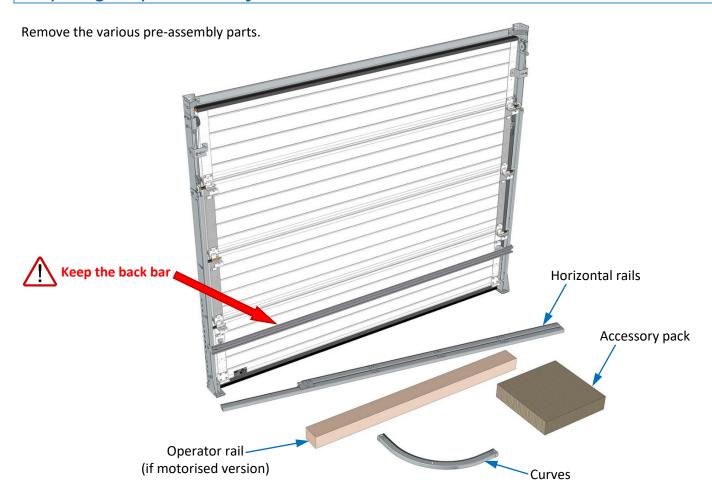

Checking the bay

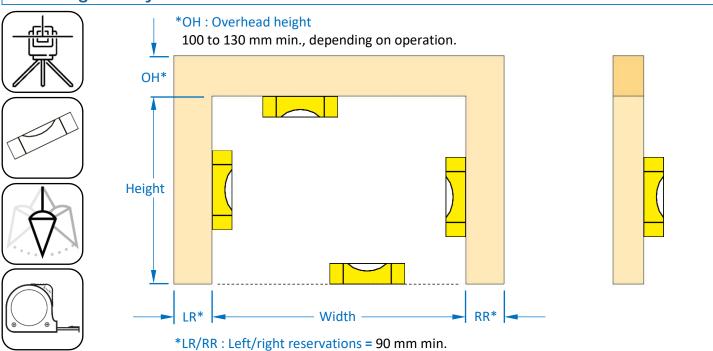




Layout of the frame






Fixing the vertical rails

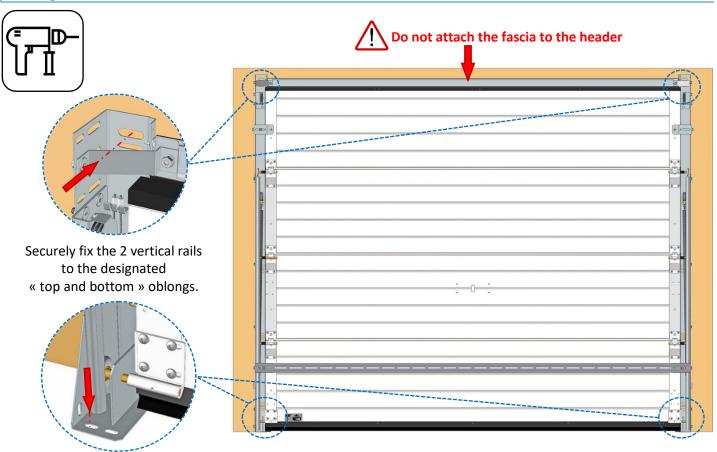




Horizontal rail installation

Assembling the stops (motorised doors)

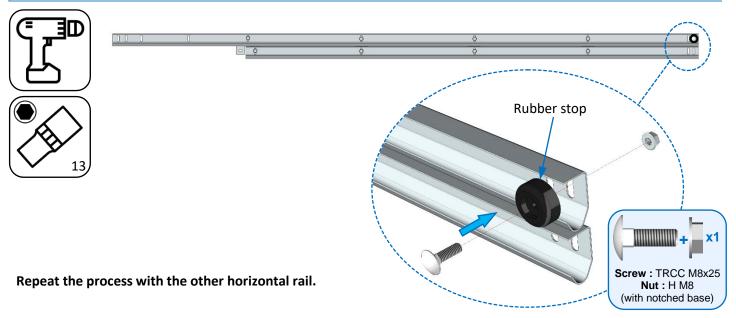


Assembling the curves

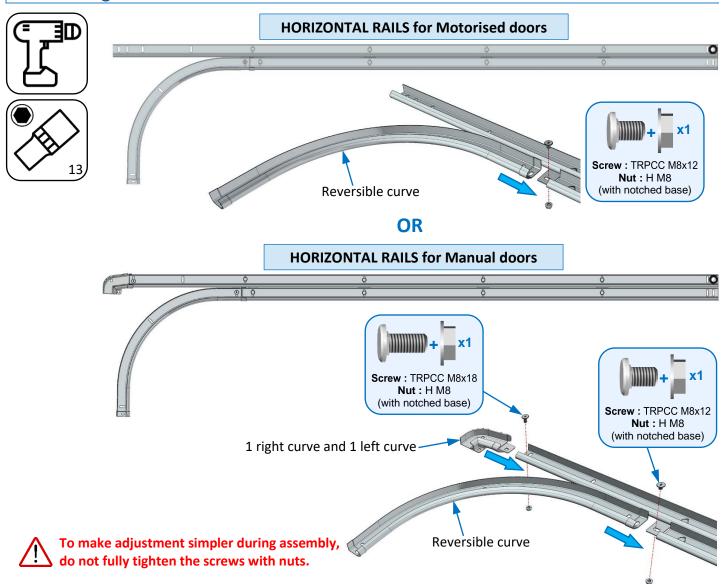




Disassembling the parts used for transport

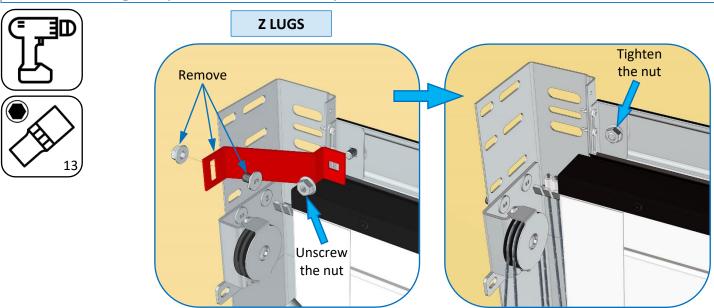


Repeat the process with the other vertical rail.

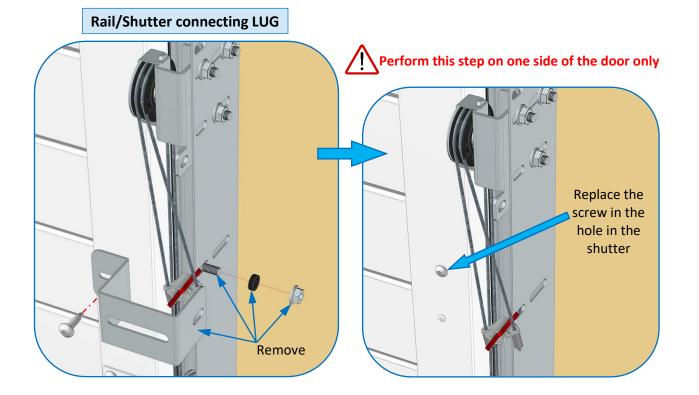




Assembling the 1st horizontal rail

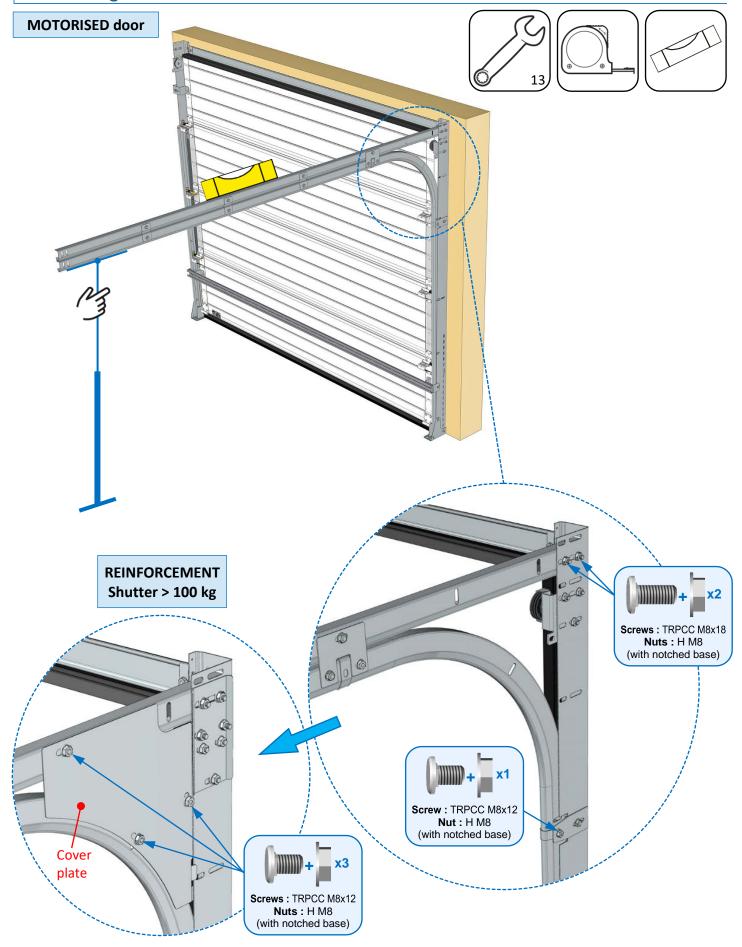




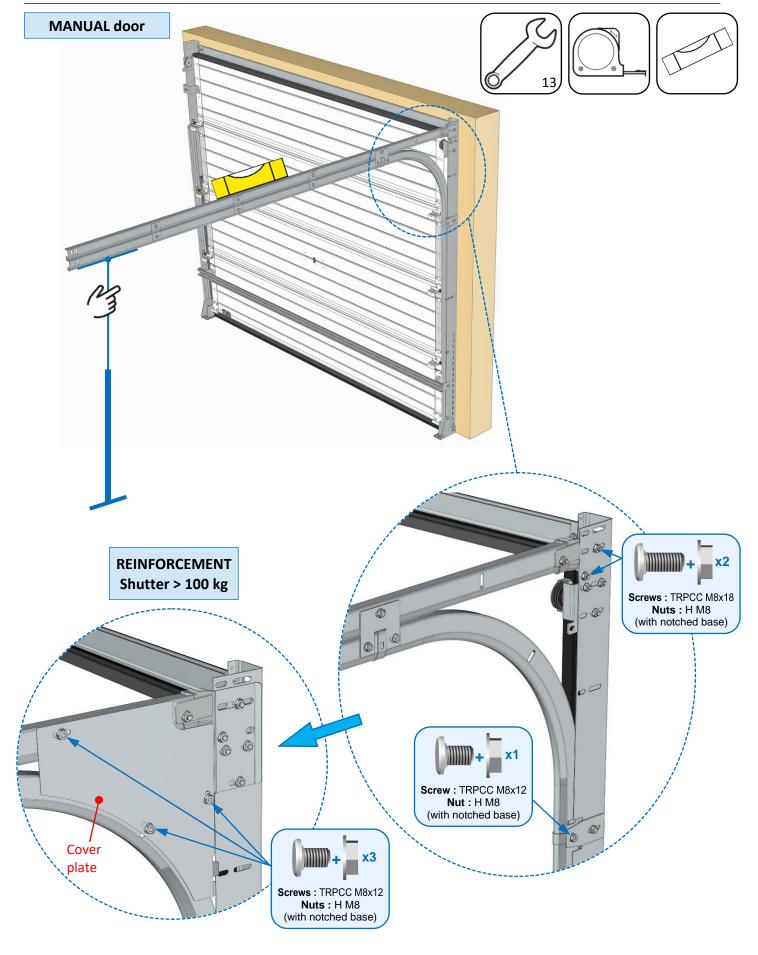




Assembling the 1st upper roller

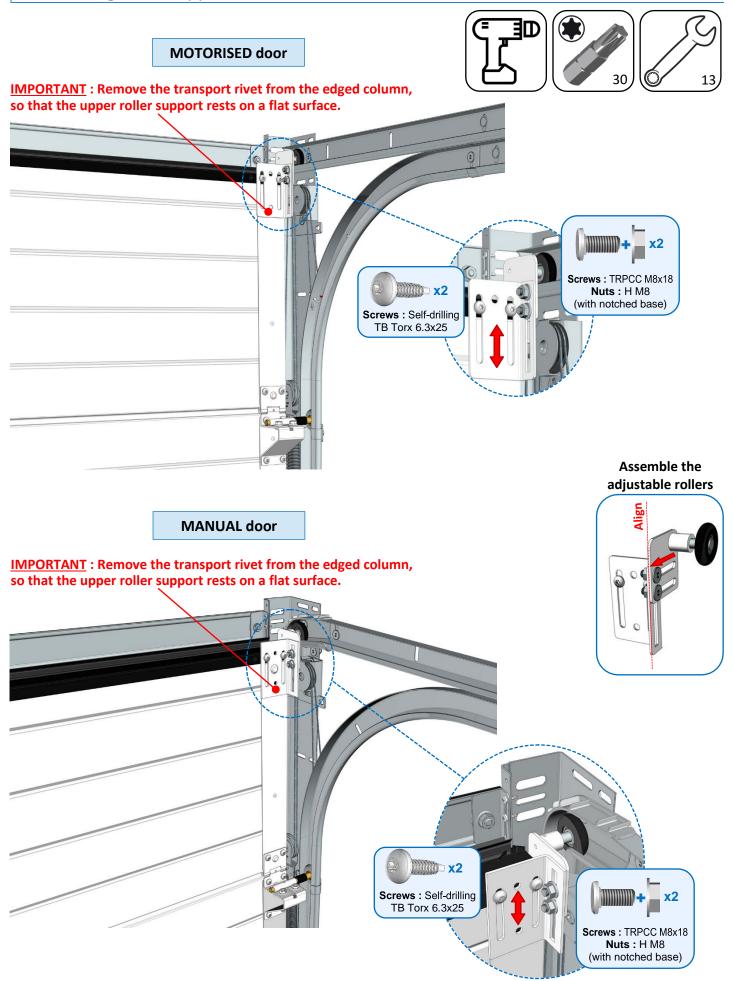




Disassembling the 2nd Rail/Shutter connecting lug

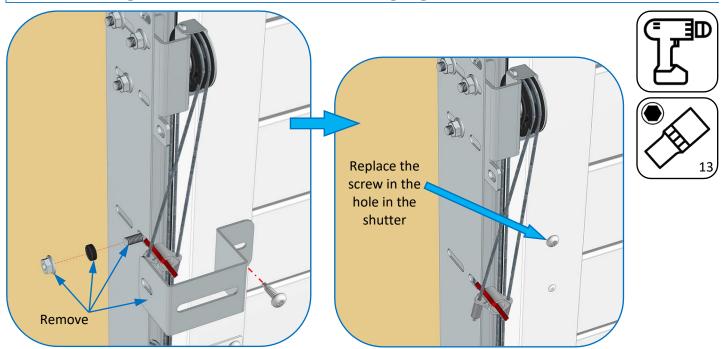


Assembling the 2nd horizontal rail

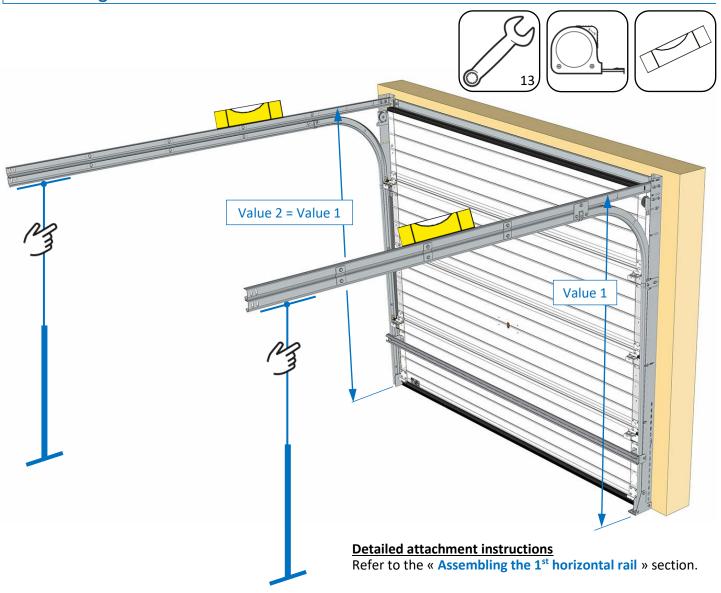




Installing the 2nd upper roller

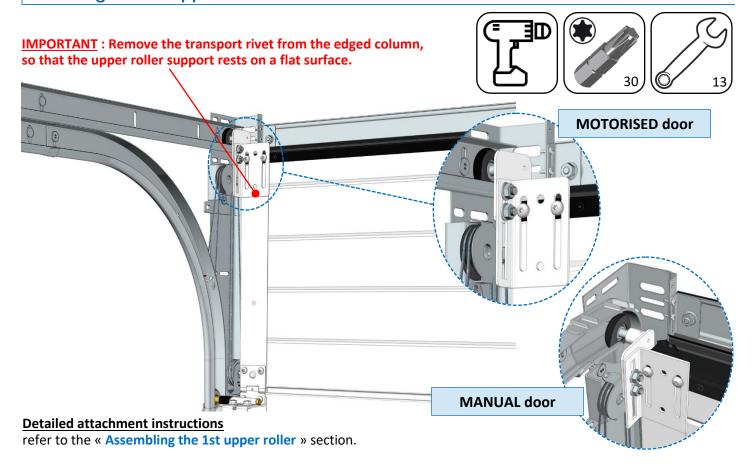


Disassembling the back bar

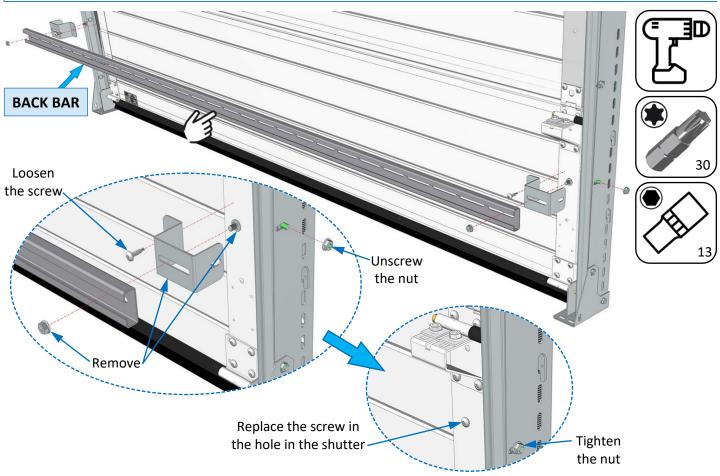




Assembling the back bar brackets

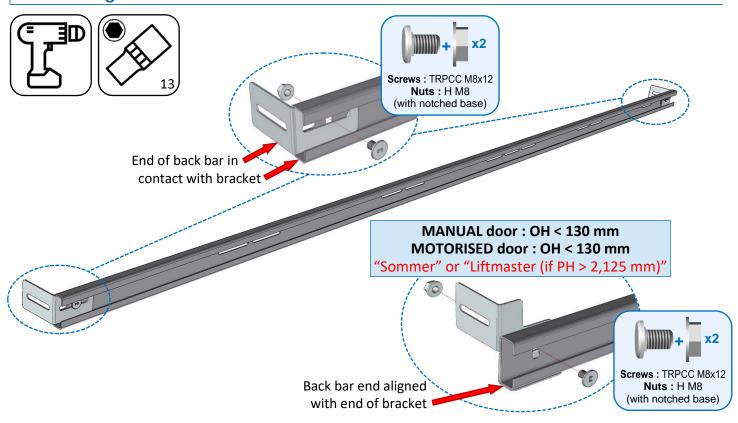


Installing the back bar

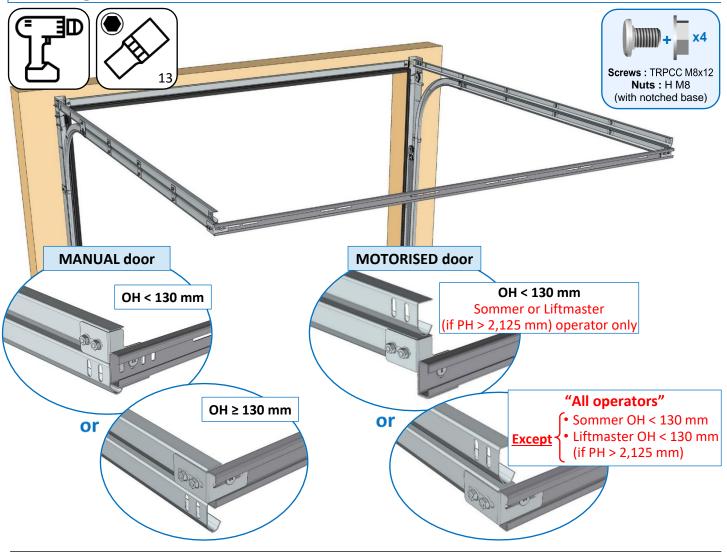



Installing the hangers

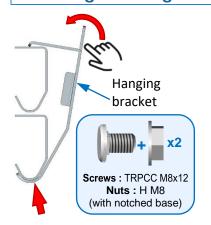


Do not fasten the hangers to the masonry. Do not fully tighten the screws with nuts.







Adapt the number of hangers to the dimensions of the doors :


- 2 hangers, if PW ≤ 3,000 or PH ≤ 2,150 mm
- 4 hangers, if PW > 3,000 or PH > 2,150 mm

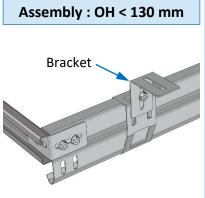

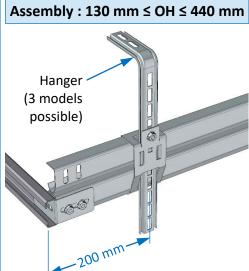

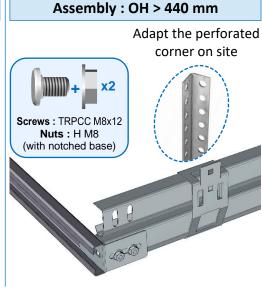


Back bar extension (option)

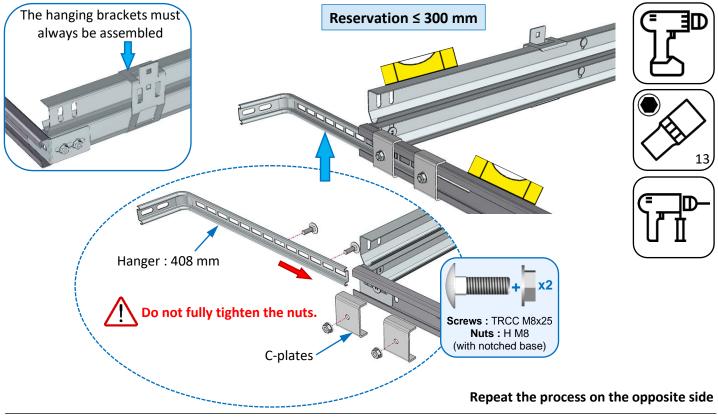




300 mm < Reservation ≤ 1,000 mm

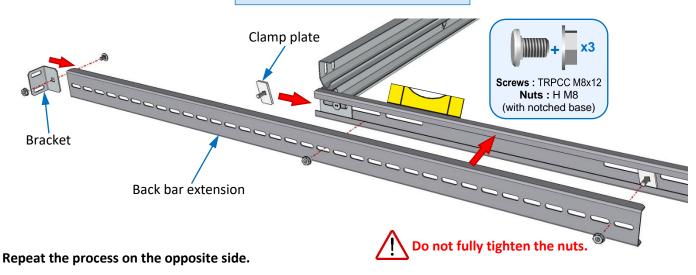

Checking the diagonals

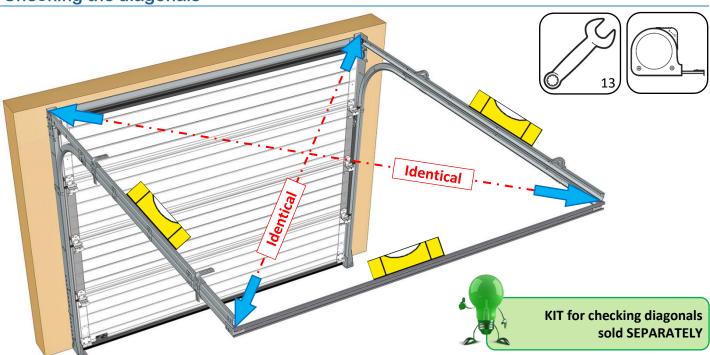


After "CONFIRMING" the diagonals, fix all the hangers. If assembling back bar extensions, tighten the screws.




Cable attachment

Opening the shutter

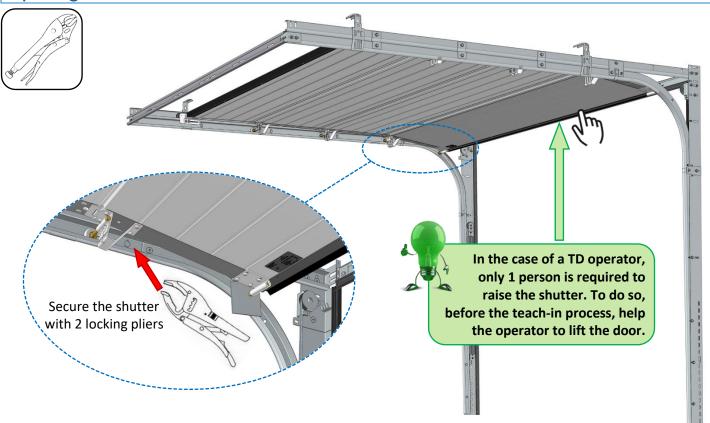

Cable attachment points

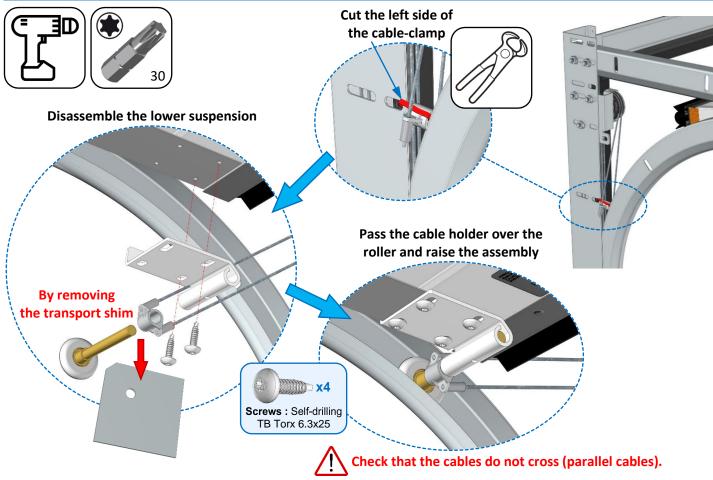


Repeat the process on the opposite side.




Vertical rail finalization

Fixing the rails



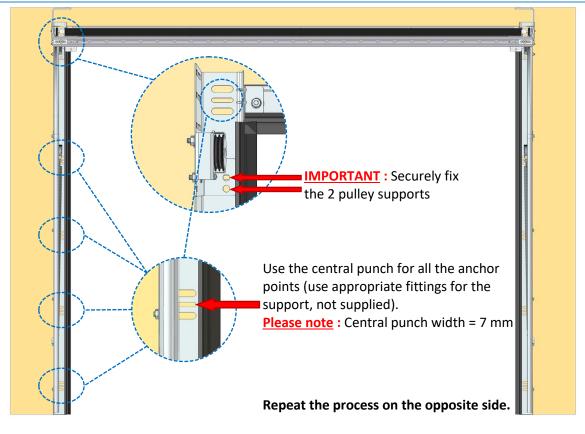


Lower the shutter

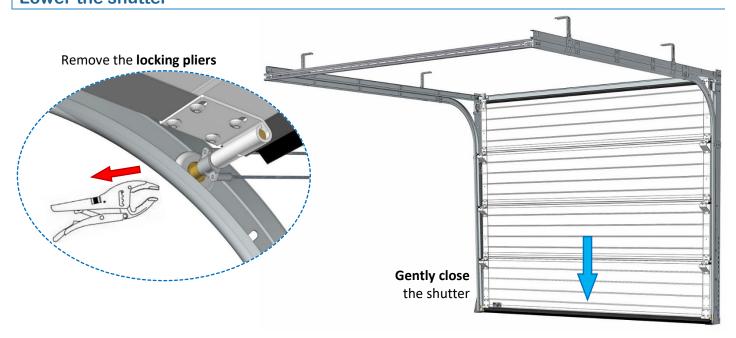




Adjustments


Adjusting and fixing the fascia

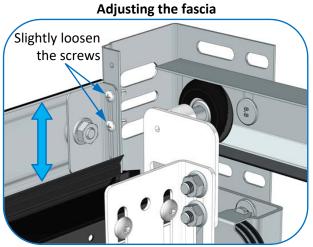

Repeat the process on the opposite side

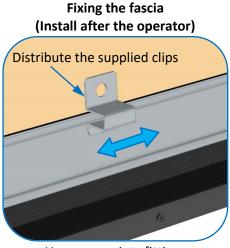



Use appropriate fittings for the support (screws and pins not supplied)






Adjusting the rollers

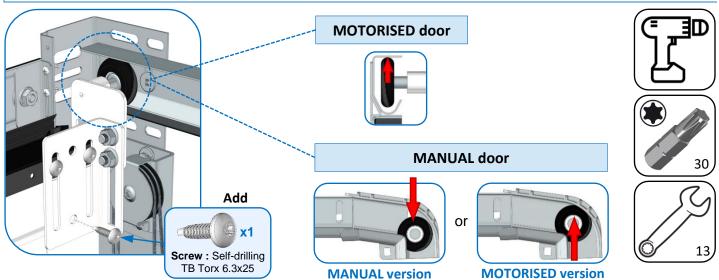

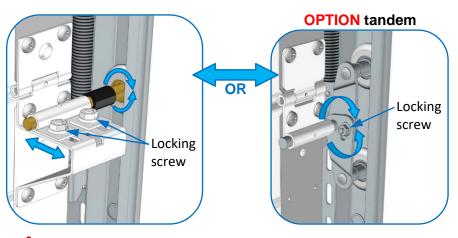

Please note: If the shutter jams at the end of the closing operation, move the bottom of the rails apart slightly.





The roller rod must be able to turn freely.


Do not flatten the vertical seals of the shutter.

Repeat the process for all rollers.




Balance

Checking the balance

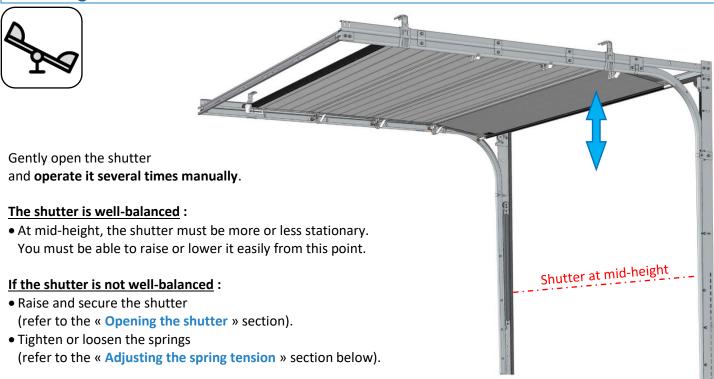

Adjusting the spring tension

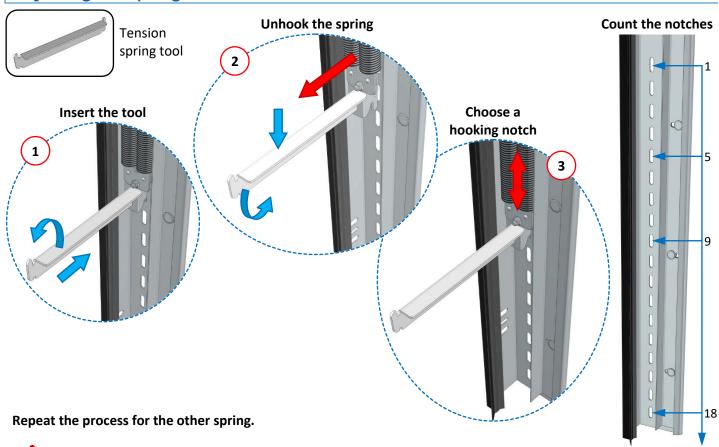

 \triangle


Make sure the 2 springs are positioned on the same notch. Check that the spring hooks are securely fastened to the rails.

Check the balance again : Refer to the « **Checking the balance** » section above.




Finishes


Fixing the end position clips (manual door)

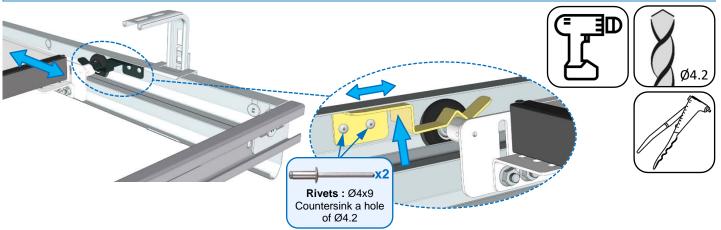

Assembling the handle

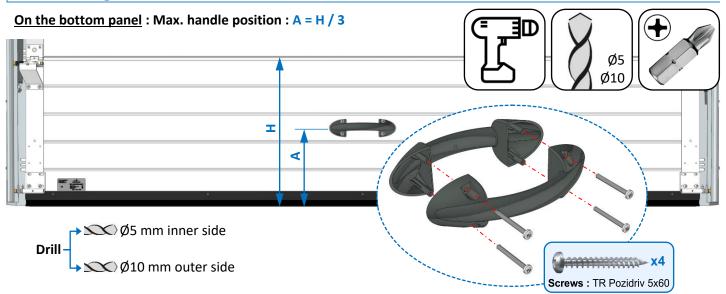


Assembling the latch (optional on motorised doors)

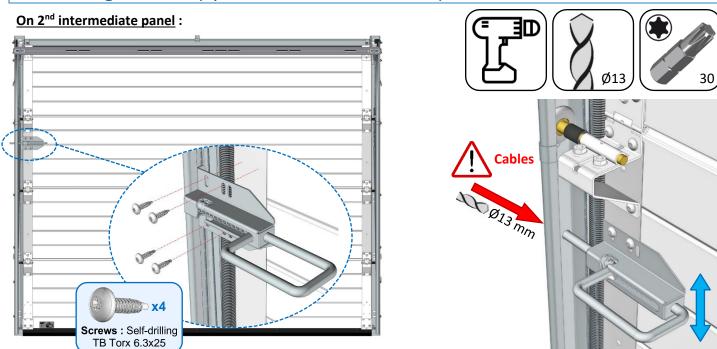




Installing the lock (optional on motorised and manual doors)


Prepare the lock:

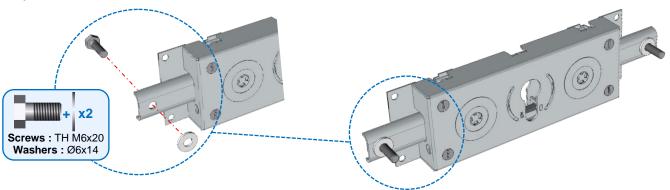


Fixing the lock:

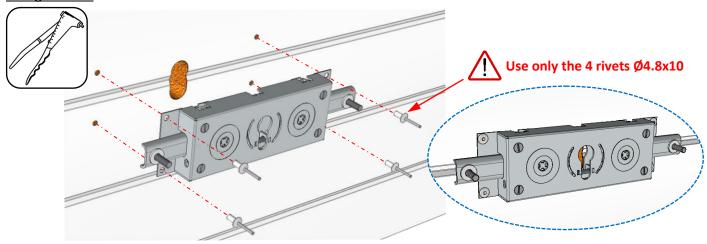

Assembling the cylinder:

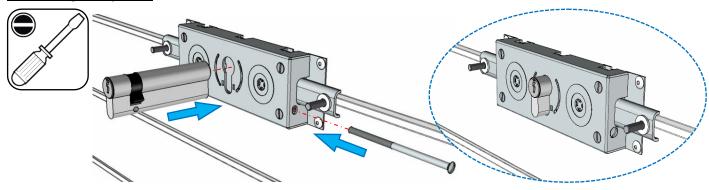


Preparing the latches (left and right):

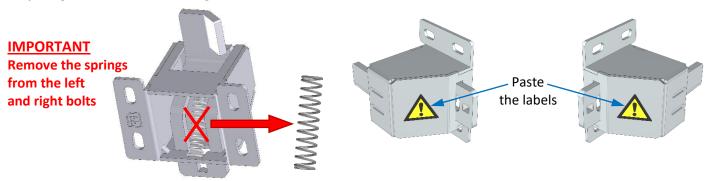



Assembling the latches (left and right):




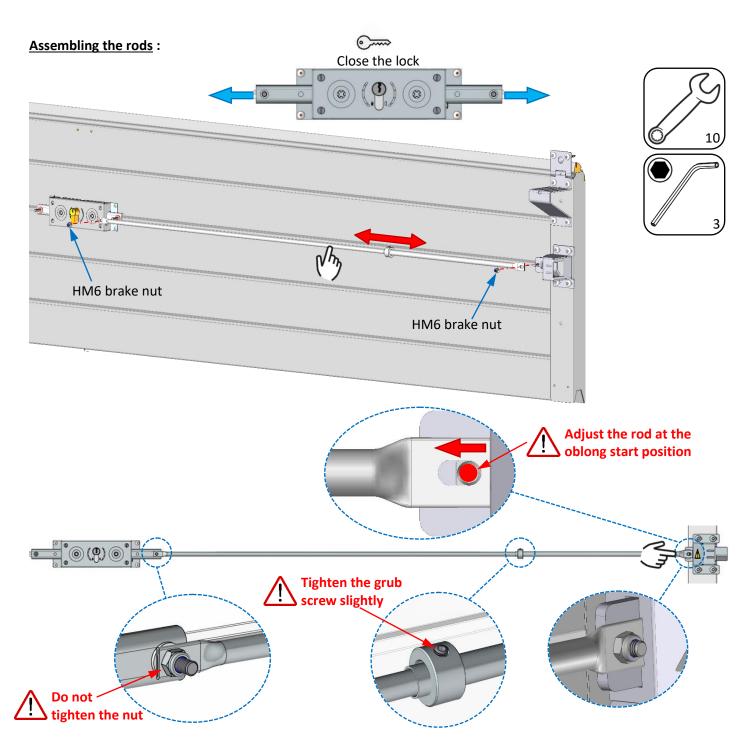

Repeat the procedure for the second rod.




Checking the lock:

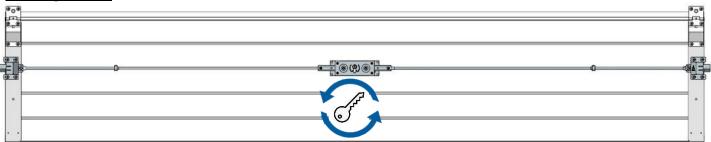


If necessary, return to the « Assembling the rods » section.

Positioning the strike plates:


1- Mark out (on the 2 latches)

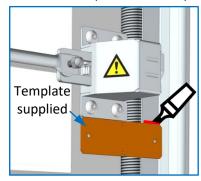


2- Open the shutter

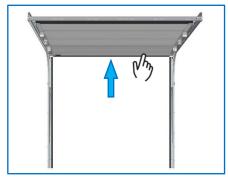


3- Offset the marking

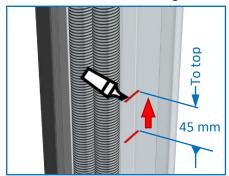


4- Position the template

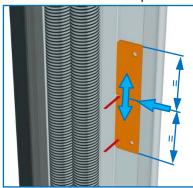


5- Mark out the drill holes

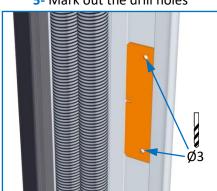


6- Drill the holes

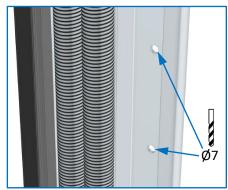

Fixing the strike plates:

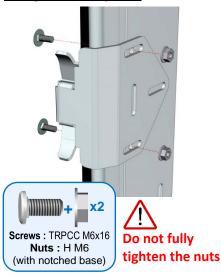




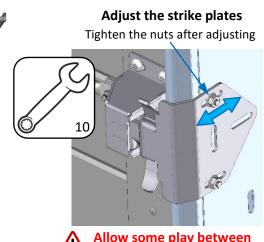


Allow some play between the strike plate and the latch



Checking the lock:

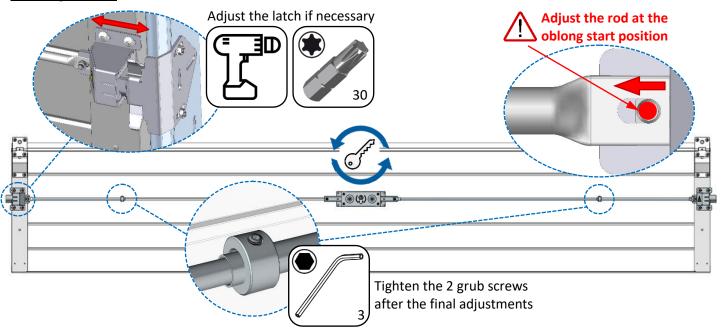


Lightly grease the lock and the 2 latches:

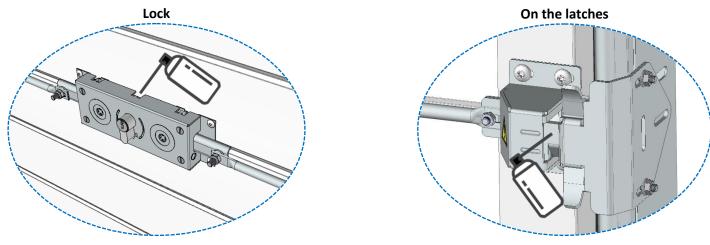


IMPORTANT:

If you feel a rough spot, check the installation of the latches, rods and strike plates.


Fixing the cover plate:

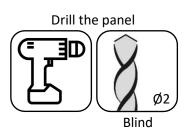

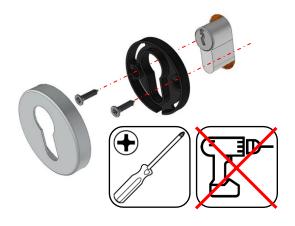



Installing the pull cord (if manual door)

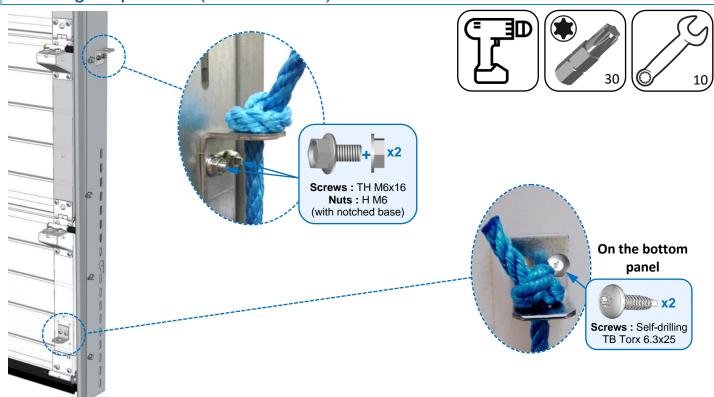


Weather seal (optional)



Weather seal section to be glued to the floor between the rails.


Refer to manual: Weather seal.

Greasing the bottom of the rails

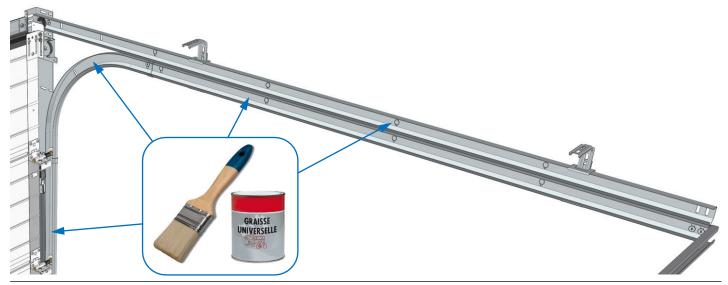




Assembling the spring pulley covers

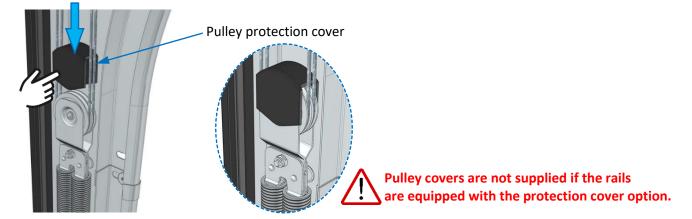


Cable labels

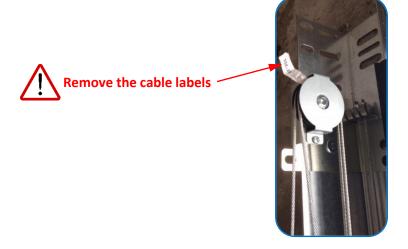



Fixing the « SOMMER » operator to the back bar

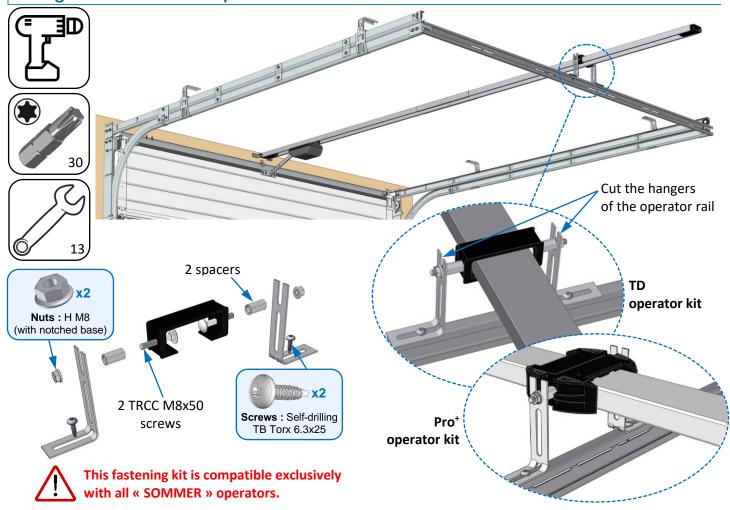



Fixing the FAAC and CAMÉ operators on the shutter

Securing the attachment (screws supplied in repair kit)





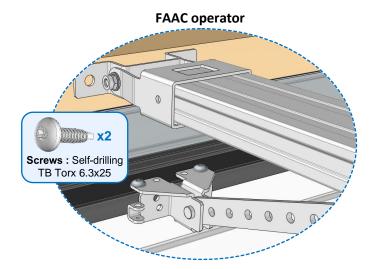

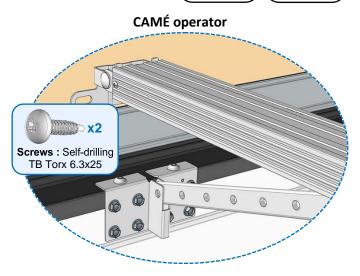

FAAC operator (ref. DOLPHIN)

•	•
Min. OH	100 mm
Max. OH	720 mm
Opening	3,380 mm

CAMÉ operator (ref. K01MV-005)

Min. OH	125 mm
Max. OH	600 mm
Opening	3.230 mm

CAMÉ operator (ref. V6000)

Min. OH	125 mm
Max. OH	600 mm
Opening	3,175 mm