

Connection manual

N°6571

05/17

2 and 4 function receiver box


Shutters, Grilles, Sectionnal doors and Gates



(Document reserved for installers)


Connections

Schematic diagram

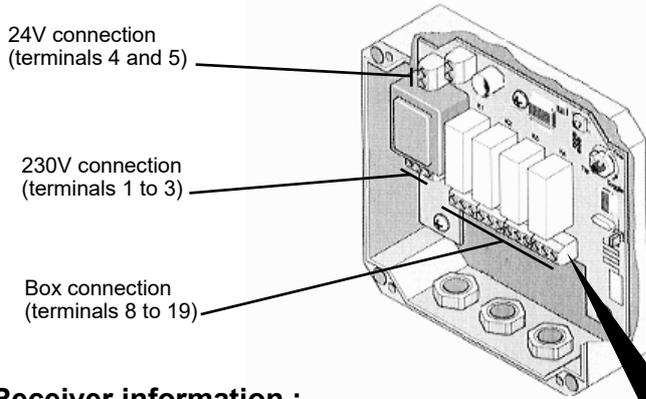


Receiver information :
Track 1 = Full opening
Track 2 = Pedestrian opening


Please note : To program a remote control, see chapter : Transmitter programming.

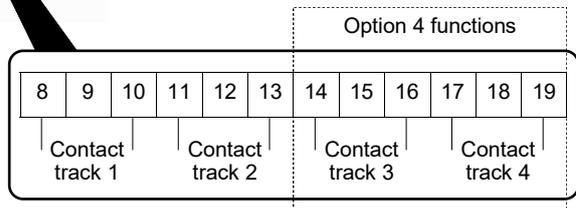


Connection with a CS 300/310 box

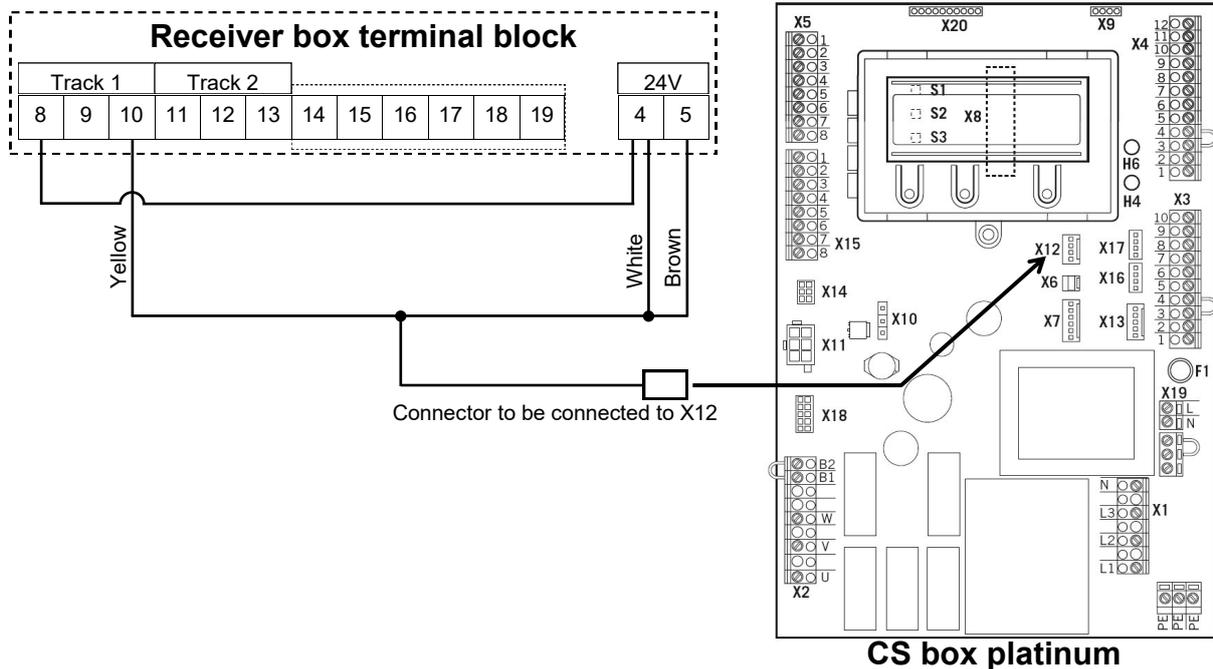


Connection with a PIC 4410 box

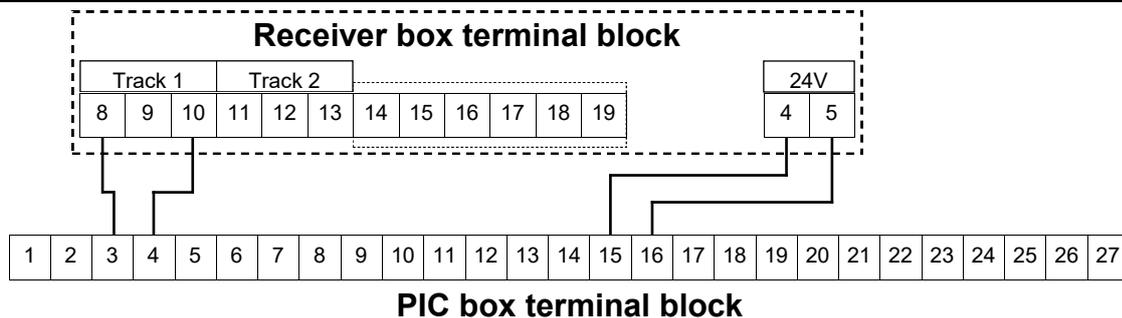


Connection with a Murax Villa 2 box

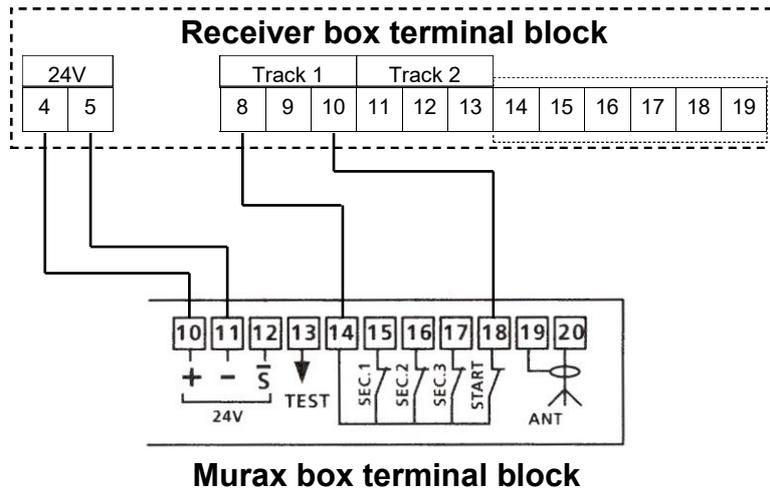


Connection with an Axovia 220A or B operator

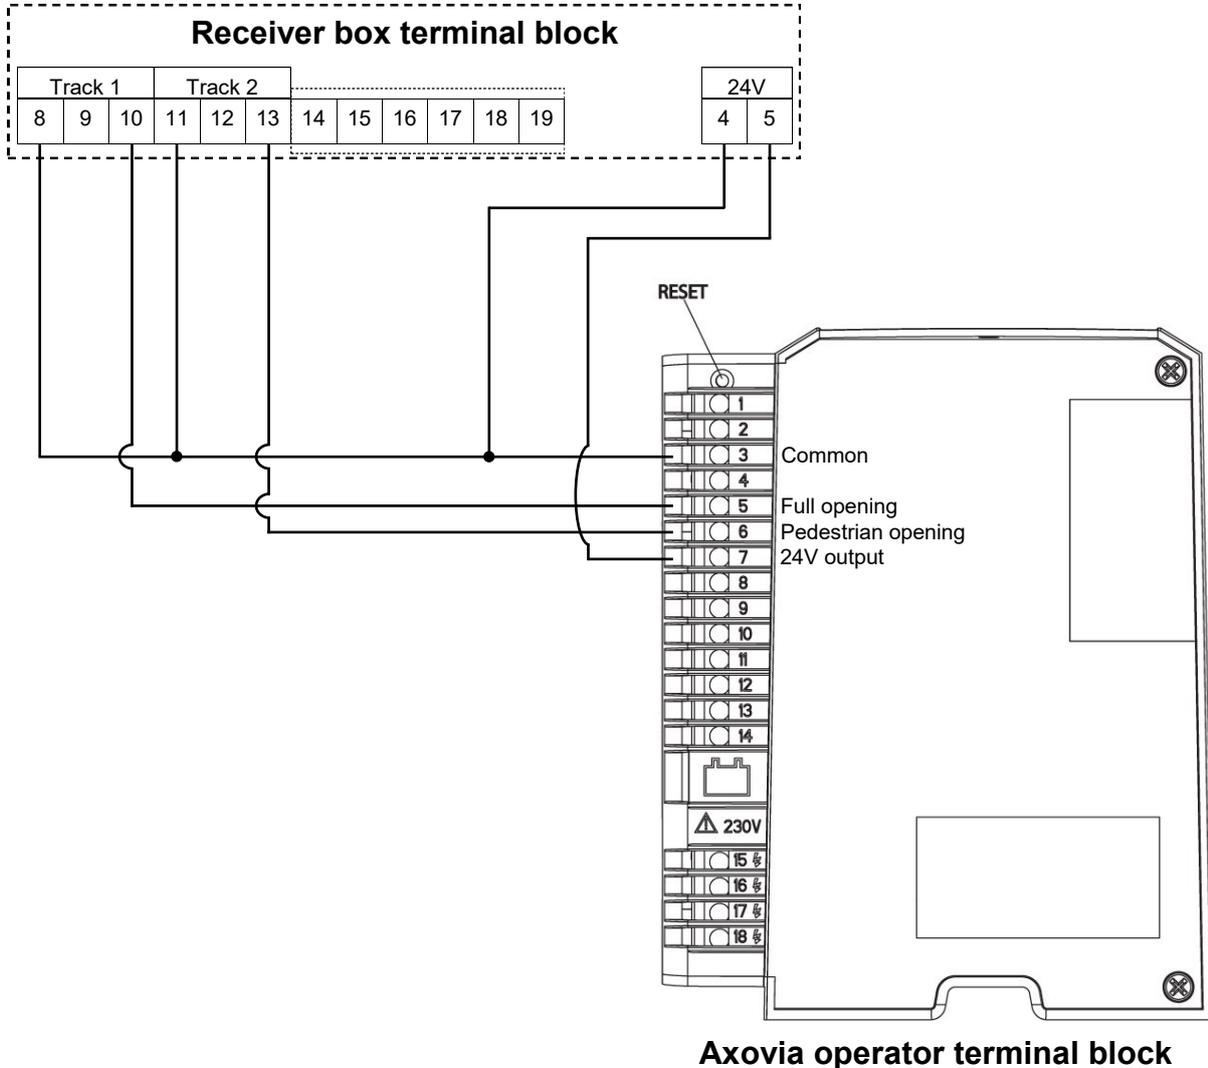

Connection with an Elixo 500 operator

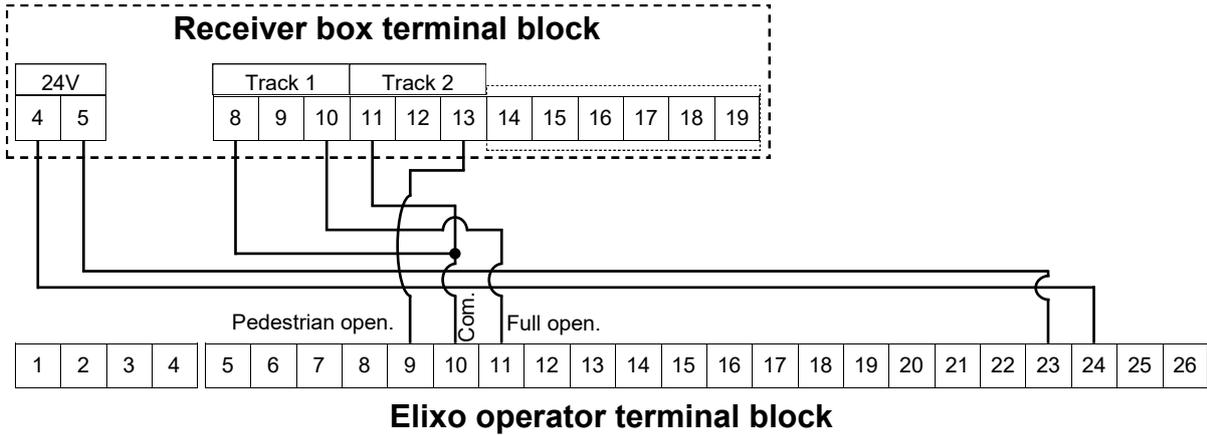


Connection with an Ax 24 box (Axovia Multi pro and Axovia 180B operator)

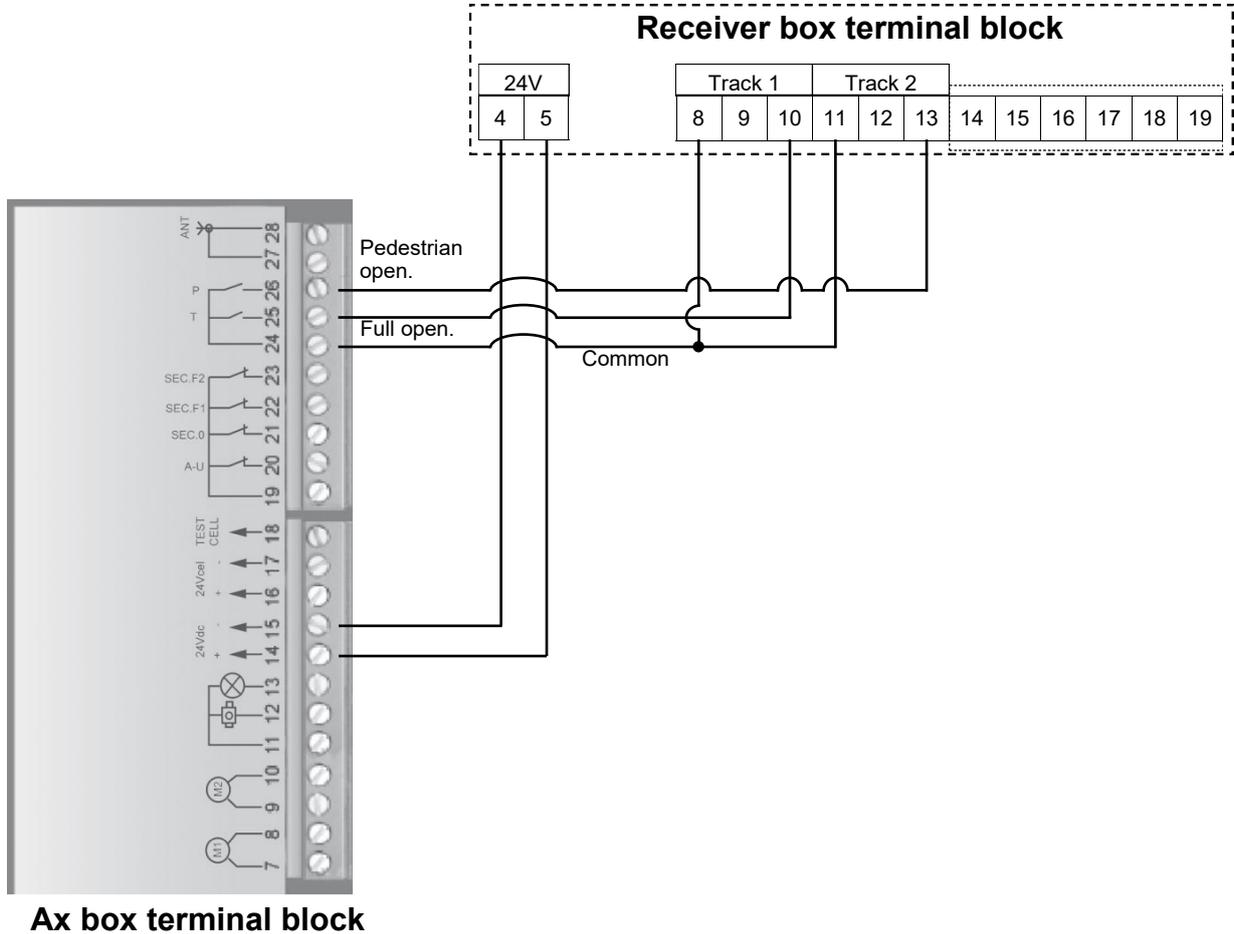

Connection with "LT 100 and LT 200" operators


"LT 100 and LT 200" operator terminal block (StarG824 board)

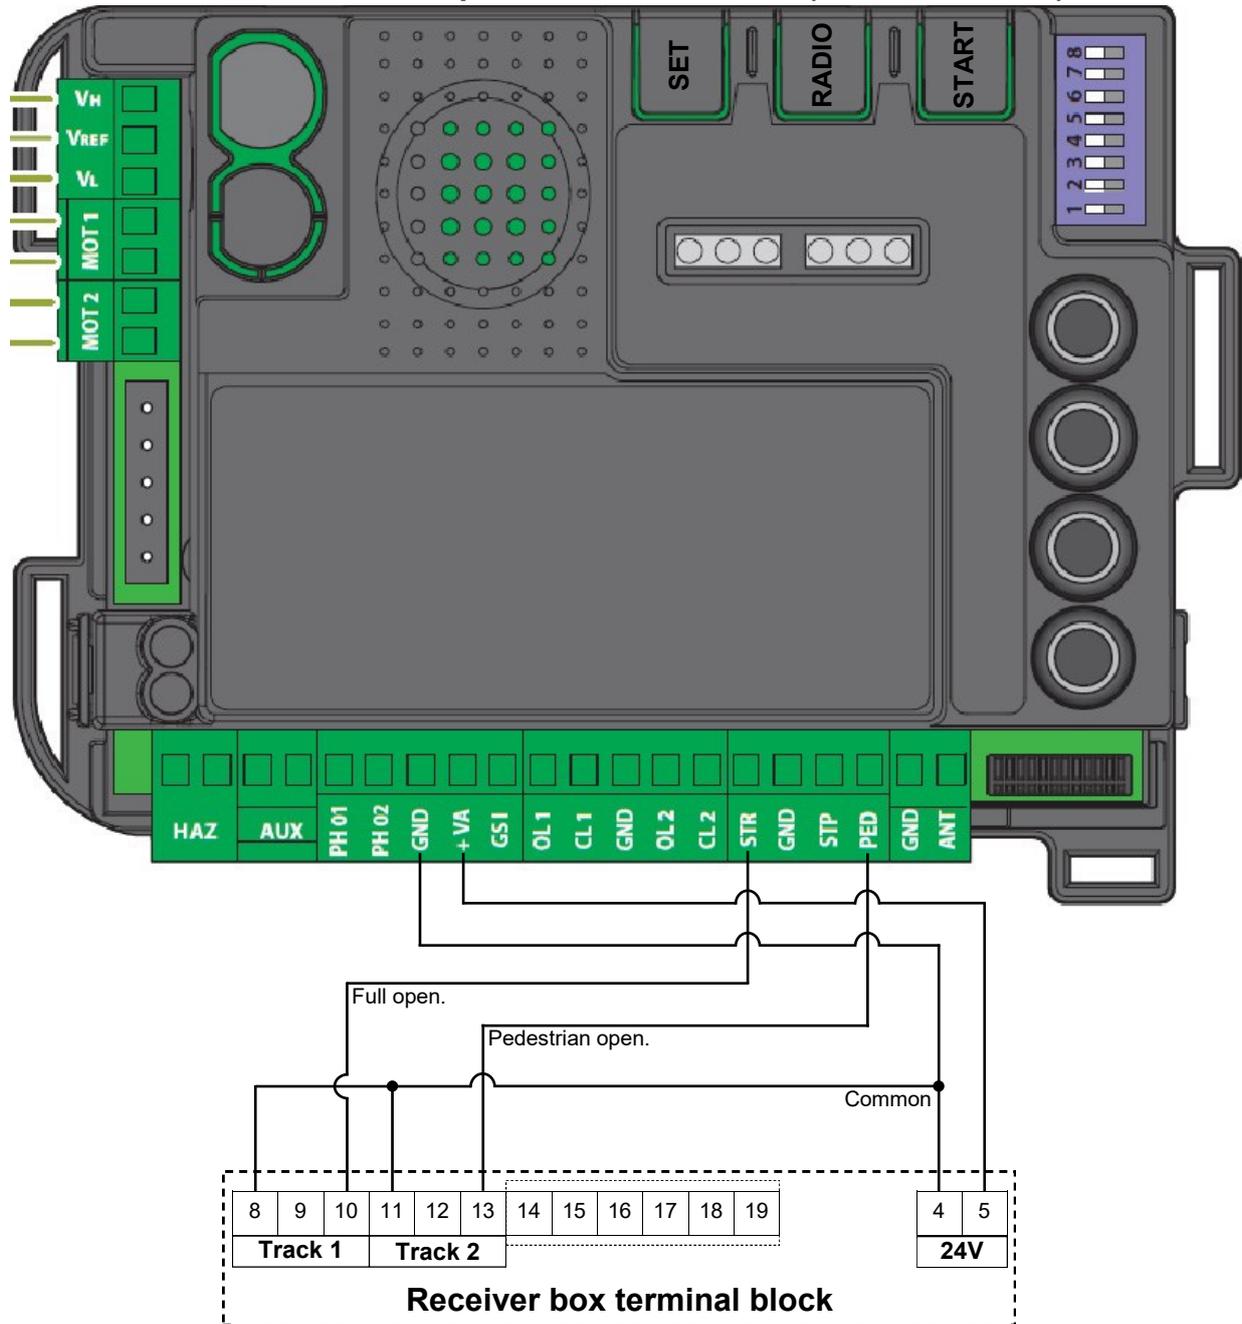

Transmitter programming

Programming a track :

- 1- Check that the red wheel is in position «**TIP**».
- 2- Select the receiver track by pressing the push button on the receiver
Once (Track 1), **2 times** (Track 2), **3 times** (Track 3) and **4 times** (Track 4) :
 The corresponding LED lights up.
- 3- Program a transmitter by continuously pressing the selected button on the transmitter : The LED on the receiver flashes and then goes out.
- 4- Release the transmitter button, coding is complete.

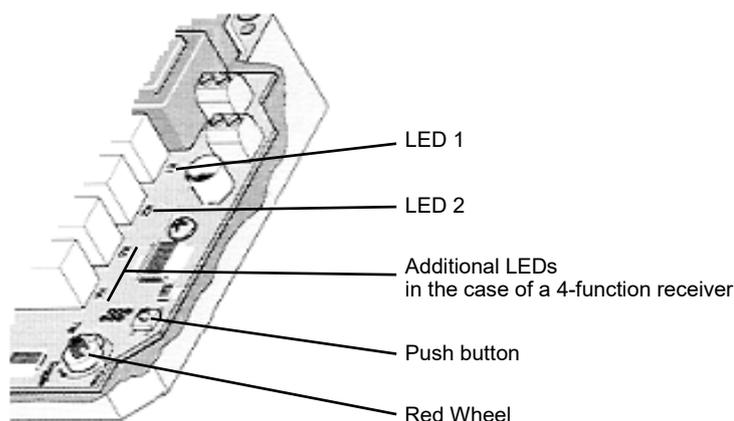

Reset one track :

- 1- Select the track to be reset by pressing the receiver push button
Once (Track 1), **2 times** (Track 2), **3 times** (Track 3) and **4 times** (Track 4) :
 The corresponding LED lights up.



Do not release the button on the last pulse

- 2- Allow the receiver push button to be pressed continuously, lors during the last pulse, for 15 seconds : The corresponding LED flashes, the corresponding track of the receiver is reset.

Reset all tracks to zero :

- 1- Press the push button on the receiver continuously for 25 seconds :
 All LEDs light up progressively, all tracks are reset to zero.