



FIXING 50 mm FALSE OVERHEADS

7090

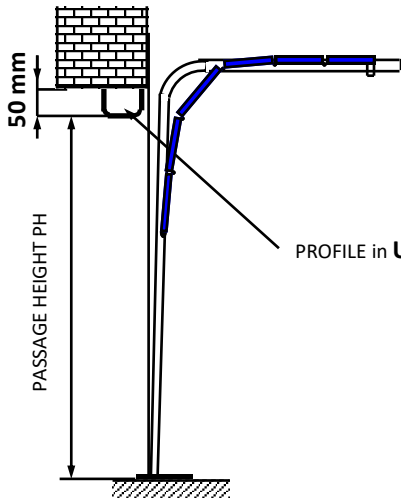


PROFILE in U LAQUER 50 x 42 x 50

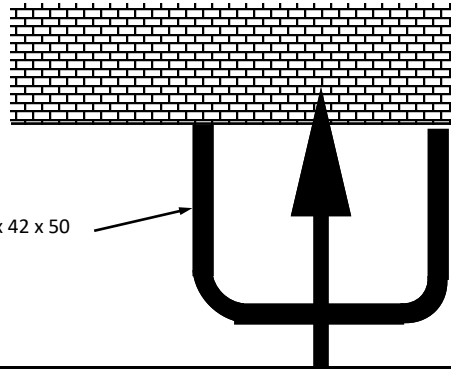


DRILL and then LIFT THE U PROFILE UNDER THE OVERHEAD

FIXING FALSE OVERHEADS from 50 mm to 90 mm

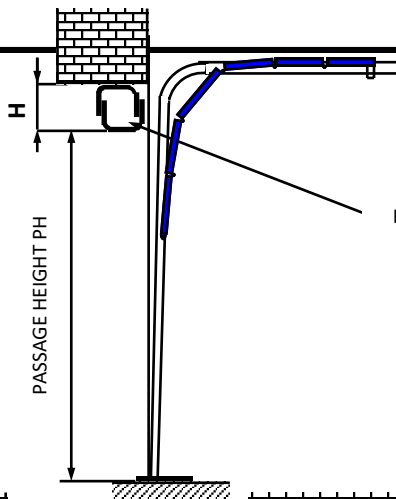


PROFILES in U LAQUER 50 x 42 x 50

1

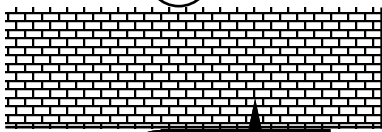

DRILL and then LIFT a U PROFILE
UNDER the OVERHEAD

2

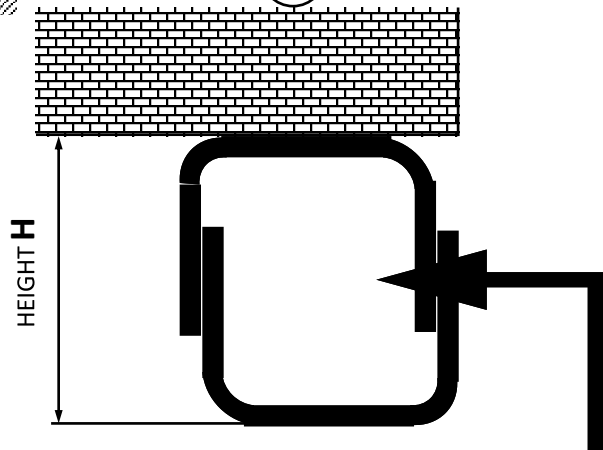

PRESENT the 2nd PROFILE, SET the HEIGHT **H** of the FALSE
OVERHEAD and FIX the 2nd U PROFILE AGAINST the PROFILE
ALREADY FIXED with RIVETS