

Installation manual

No. 7365

03/16

INDUS & VILLA SECTIONALS

OMÉGA STIFFENER KIT



(Document reserved for installers)




IMPORTANT

The stiffeners are installed flat on to the panels.
Please note: It is important that the panel is not curved and that it is not exposed to the sun.




Installation on the top panel

A) Position the Oméga stiffener and drill a hole in the panel using the drill holes in the stiffener.

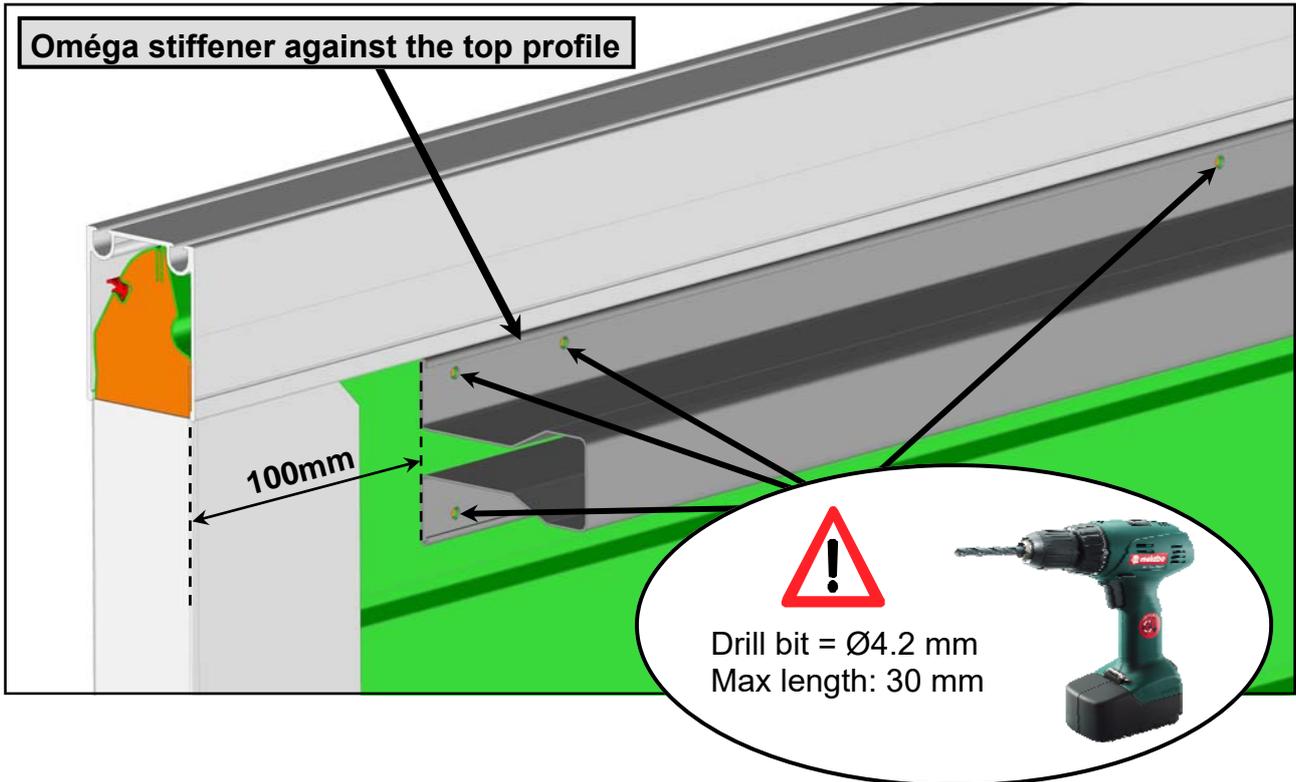


B) Attach the Oméga stiffener with the peel rivets.

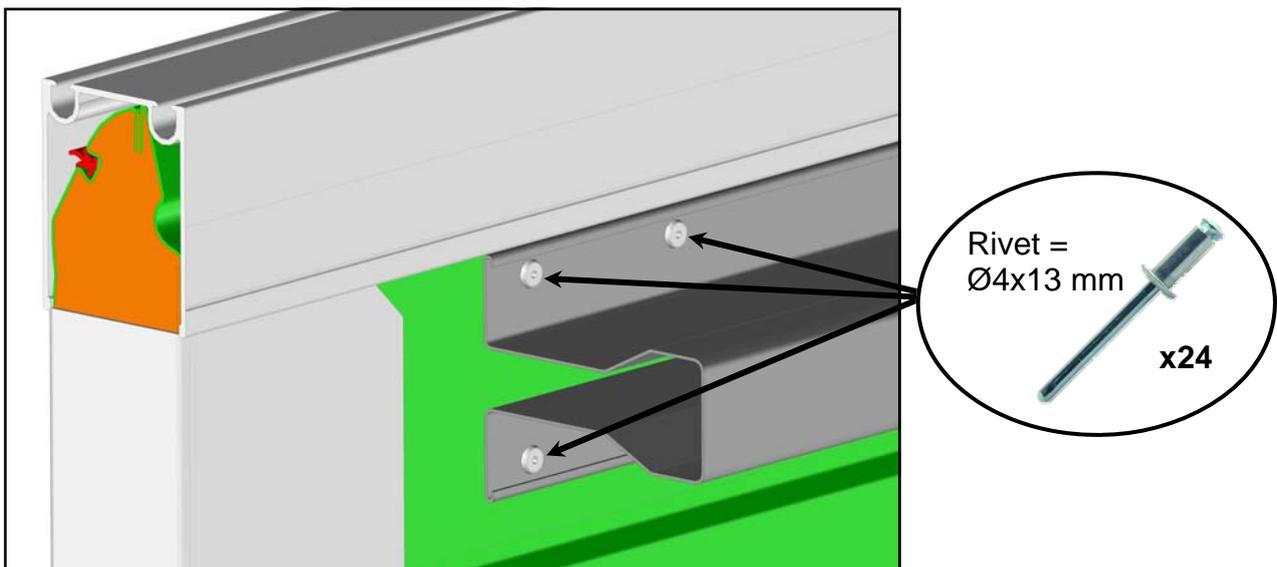


Installation on the intermediate panel

A) Position the Oméga stiffener and drill a hole in the panel using the drill holes in the stiffener.

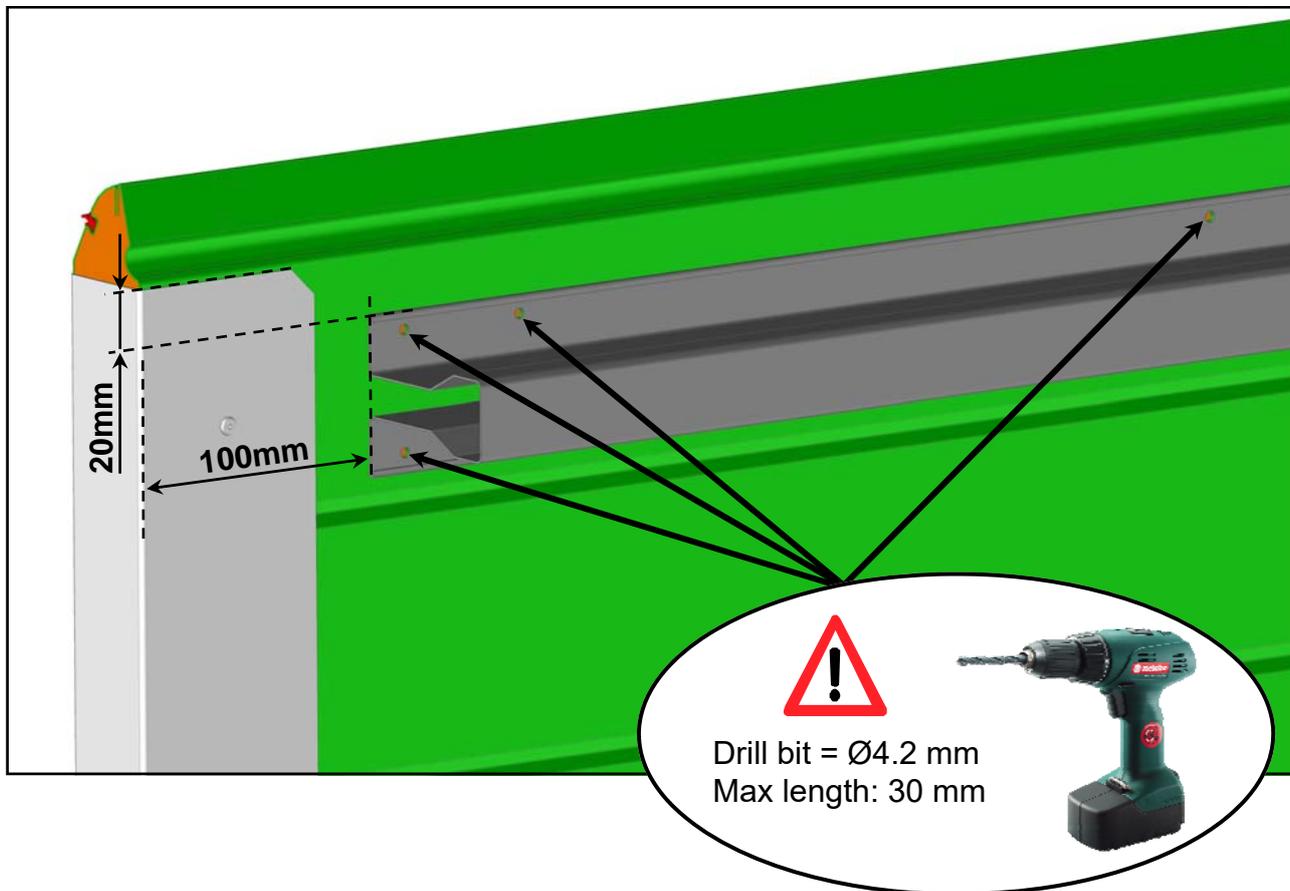

B) Attach the Oméga stiffener with the peel rivets.

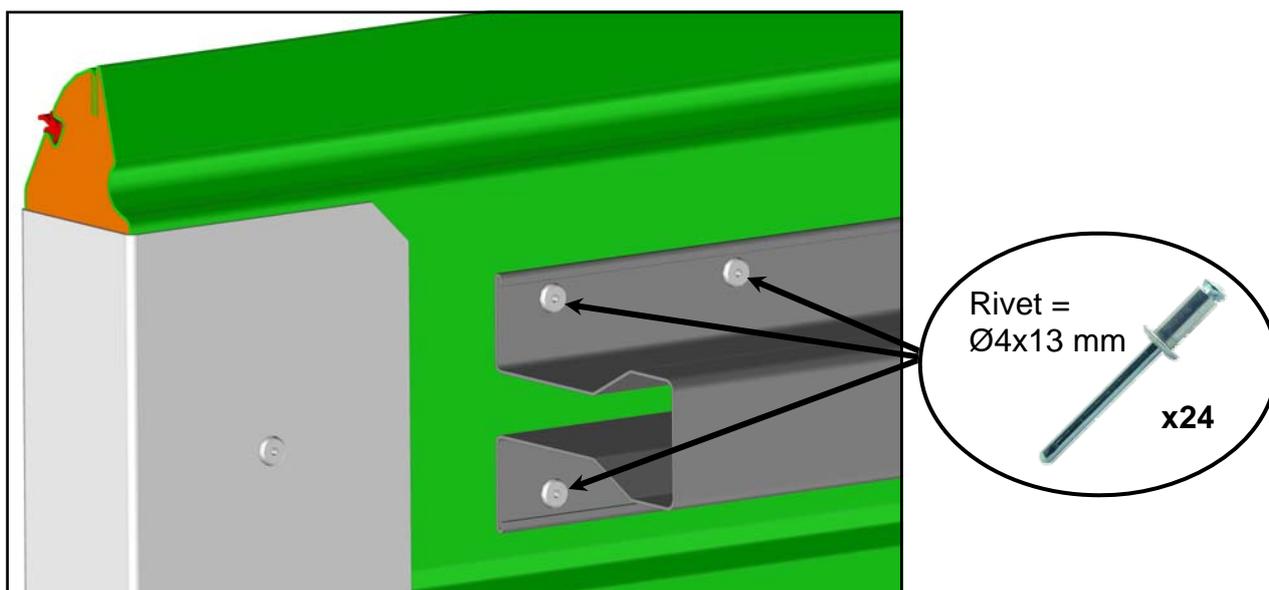

Positioning of the panels on the shutter

