


# Manual : N° 1970

# ATTACHMENT

## *Murax P110 Shutters*

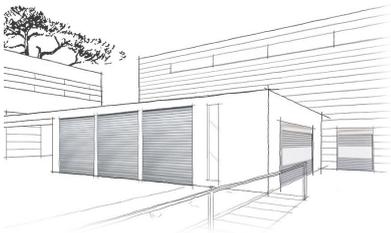

### *Steel hooks for hurricane guiding rails*

**Inner winding / Axle diameter = 168 mm**

**EXTERIOR**

**Corner piece = 50x25**  
all the way up

Welding during installation

**Guiding rail = 80x50x80**

Welding during installation

**MASONRY**

**Corner piece = 50x25**  
all the way up

**INTERIOR**




**If the reinforced clamps are welded onto the guiding rail :  
The corner piece of 50x25 must be recut in order to fix it between  
the clamps.**

**(Document reserved for installers)**



It is essential to follow the assembly order of the slats, starting from the winding axle (non-compliance will lead to incorrect functioning).

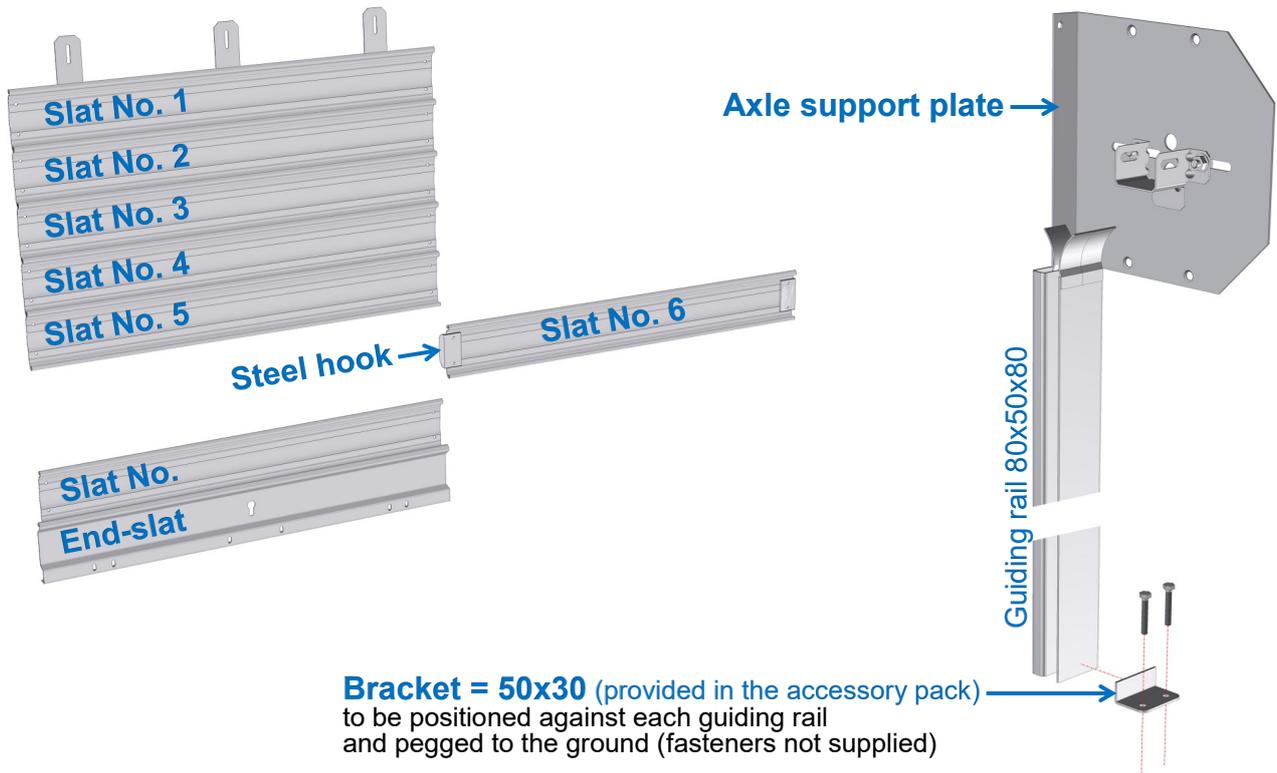

**No. of slats with steel hooks, for axle of Ø168 mm**  
 6 - 11 - 16 - 21 - 26 - 31 - 35 - 37 - 41 - 44 - 47 - 51 - 55 - 59 - 64 - 68 - 73 - 77 - 82 - 86 - 91 - 96 - 101

**Clearance to be maintained for shutters equipped with steel hurricane hooks**

**Important :** Slats with steel hooks must be arranged as per the order stipulated above. Non-compliance with the assembly order of slats will lead to incorrect functioning.

