


# **DELIAL INSTALLATION MANUAL**<sup>2520</sup>

#### **ROLLING GRILLE ON PIVOT FITTED TO FLOOR**







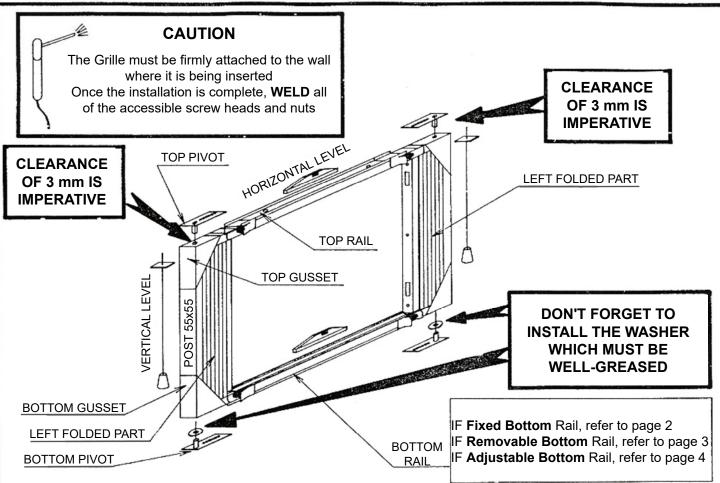

The axle of the top **PIVOT** and the axle of the bottom **PIVOT** must be plumb and correctly aligned:

If the wall is plumb, start by installing the bottom pivot

If the wall is not plumb and is open at the top, start by installing the bottom pivot


If the wall is not plumb and is open at the bottom, move the position of the top pivot downwards and start with the bottom pivot.


- 1) INSERT the axle of the bottom pivot, **DIRECT IT** toward the floor and **DRILL** at least two holes in the floor without attaching the pivot.
- 2) **INSERT** the axle of the bottom pivot fitted with the greased **WASHER** into the bottom gusset, after applying a small amount of grease.
- 3) INSERT the axle of the top pivot without washer into the top gusset, after applying a small amount of grease.
- 4) INSERT the assembly of FOLDED PARTS into the bay and attach the bottom pivot opposite the two previously drilled holes.
- **5) POSITION** it under the header, **DRILL** and **ATTACH** the top pivot while ensuring that the post 55x55 is perfectly plumb and maintaining a clearance of 3 mm between the top pivot and the top gusset.
- **6) ATTACH** the **BOTTOM** and **TOP RAILS**, ensuring they are aligned and according to the type (refer to pages 2-3-4)
- 7) CHECK that there is a clearance of 10 mm between the top of the bars and the bottom of the top rail

09/15


PAGE 1

### ASSEMBLING THE RAILS WITH A FIXED BOTTOM RAIL

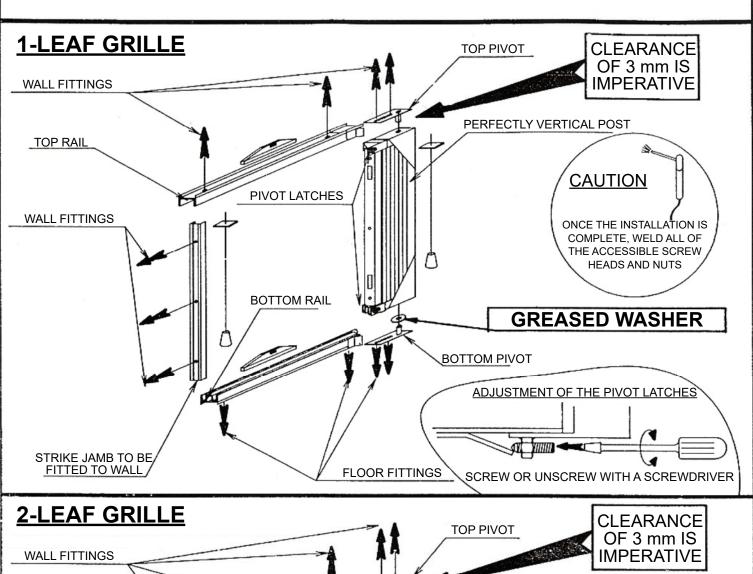

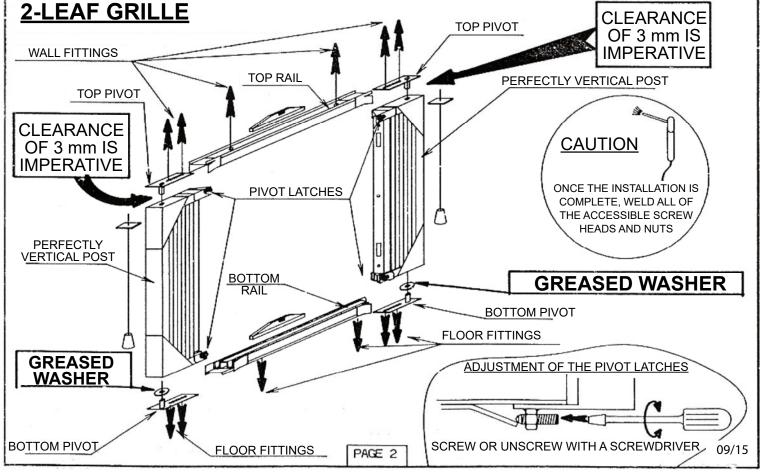

# ASSEMBLING THE RAILS WITH A REMOVABLE BOTTOM RAIL

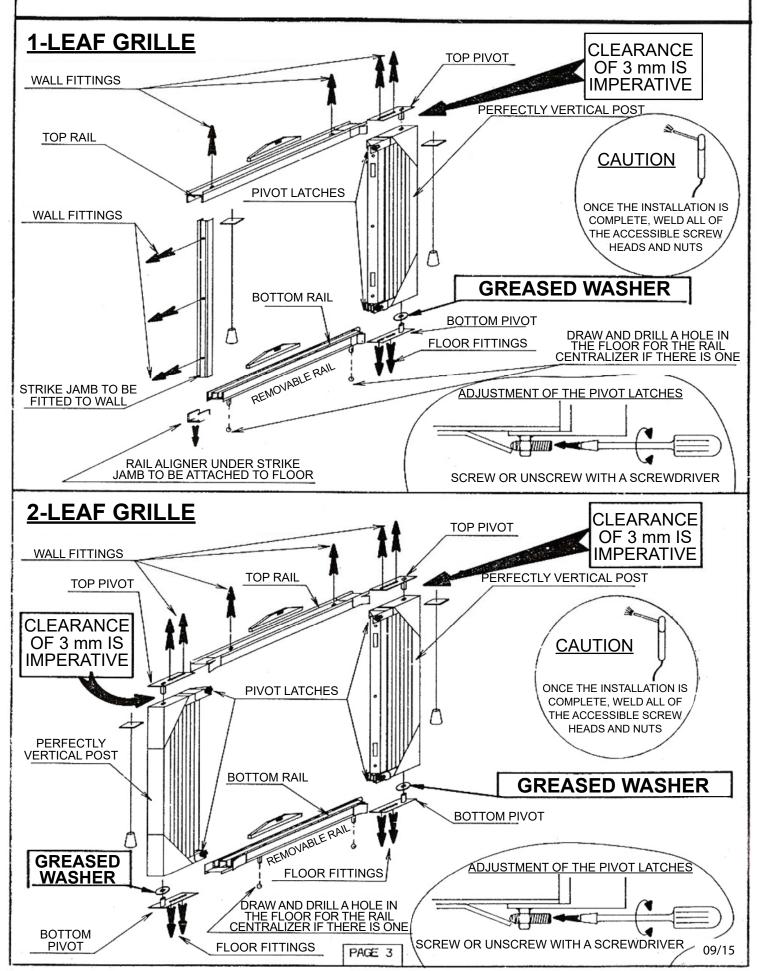

# ASSEMBLING THE RAILS WITH AN ADJUSTABLE BOTTOM RAIL

